

# User Guide

# iSBEM

An Interface for SBEM (Simplified  
Building Energy Model)

*Part of the National Calculation Methodology: SBEM for assessing  
the Energy Performance of Buildings*

## A User Guide to iSBEM: (3) EPC Generation - UK

iSBEM version 5.2.d

31 July 2014



## Version history

User guide version	For iSBEM version	Building Regulations
22 <sup>nd</sup> December 2005	1.0	2006
24 <sup>th</sup> January 2006	1.0.b	2006
9 <sup>th</sup> March 2006	1.0.b	2006
11 <sup>th</sup> May 2006	1.1.a	2006
4 <sup>th</sup> October 2006	1.2.a	2006
6 <sup>th</sup> April 2007	2.0.a	2006
30 <sup>th</sup> April 2007	2.0.b	2006
18 <sup>th</sup> May 2007	2.0.c	2006
2 <sup>nd</sup> November 2007	2.9.b	2006
6 <sup>th</sup> February 2008	3.0.a	2006
12 <sup>th</sup> February 2008	3.0.b	2006
1 <sup>st</sup> April 2008	3.1.a	2006
9 <sup>th</sup> July 2008	3.2.b	2006
10 <sup>th</sup> November 2008	3.3.a	2006
23 <sup>rd</sup> December 2008	3.3.b	2006
29 <sup>th</sup> April 2009	3.4.a	2006
15 <sup>th</sup> May 2009	3.4.a	2006
26 <sup>th</sup> May 2009	3.4.a	2006
1 <sup>st</sup> March 2010	3.5.a	2006
28 <sup>th</sup> May 2010	4.0.a	2010
9 <sup>th</sup> July 2010	4.0.a	2010
12 <sup>th</sup> November 2010	4.1.a	2010
31 <sup>st</sup> March 2011	4.1.c	2010
12 <sup>th</sup> December 2011	4.1.d	2010
28 <sup>th</sup> January 2013	4.1.e	2010
6 <sup>th</sup> April 2014	5.2.b	2013 for England
1 <sup>st</sup> July 2014	5.2.d_beta	Beta 2014 for Wales
31 <sup>st</sup> July 2014	5.2.d	2013 for England and 2014 for Wales

## Key changes and additions from previous versions of the User Guide

### Changes and additions in 31<sup>st</sup> July 2014 version 5.2.d:

There have been no changes since the previous version. Please see the other volumes in this set: “**How to use iSBEM: Basics - UK**” and “**How to use iSBEM: Compliance Assessment - UK**”.

This manual, together with the software tools described in it, were developed by the BRE for the Department for Communities and Local Government (DCLG).

### **Disclaimer**

The iSBEM User Guide cannot provide legal advice or a definitive interpretation of the law. The guidance provided in this document is limited to the technical operation of the software tool. It is offered in good faith but is not binding on any person(s) or organization. The same applies to the default values in the interface, which should be viewed as conservative suggestions intended to be replaced by actual values.

DRAFT

# Table of Contents

<i>Version history</i> .....	2
<b>1. WHAT IS IN THIS GUIDE</b> .....	<b>8</b>
1.1. Scope of the guide .....	8
<b>2. CALCULATION BASICS</b> .....	<b>9</b>
2.1. UK Energy Performance Certificate purposes .....	9
<b>3. ENTERING A BUILDING INTO iSBEM</b> .....	<b>12</b>
3.1. Important note on the default values in iSBEM .....	12
3.2. General form .....	12
3.2.1. <i>File Options tab</i> .....	12
3.2.2. <i>General Information tab</i> .....	14
3.2.3. <i>Obtaining Potential Asset Rating for EPC Scotland</i> .....	20
3.3. Project Database form .....	23
3.4. Geometry form .....	24
3.4.1. <i>Project tab</i> .....	24
3.4.2. <i>Defining zones – Zones tab</i> .....	25
3.4.3. <i>Defining envelopes – Envelope tab</i> .....	28
3.4.4. <i>Defining windows and rooflights – Windows &amp; Rooflights tab</i> .....	28
3.4.5. <i>Defining doors – Doors tab</i> .....	29
3.4.6. <i>Quick Envelopes tab: Short cut to creating envelopes and windows</i> .....	29
3.5. Building Services form.....	29
3.5.1. <i>Global and Defaults tab</i> .....	30
3.5.2. <i>Defining HVAC Systems – HVAC Systems tab</i> .....	32
3.5.3. <i>Defining HWS – HWS tab</i> .....	35
3.5.4. <i>Defining Solar Energy Systems (SES) – SES tab</i> .....	37
3.5.5. <i>Defining a Photovoltaic system (PVS) – PVS tab</i> .....	37
3.5.6. <i>Defining a wind generator – Wind Generators tab</i> .....	37
3.5.7. <i>Defining a CHP generator – CHP Generator tab</i> .....	37
3.5.8. <i>Defining a Solar Collector – Solar Collectors tab</i> .....	37
3.5.9. <i>Defining the zone specific building services- Zones tab</i> .....	37
3.6. Building Navigation form.....	41
3.7. About iSBEM form.....	41
<b>4. CALCULATING AND VIEWING THE ENERGY PERFORMANCE OF THE BUILDING - THE RATINGS FORM AND OUTPUT REPORTS</b> .....	<b>42</b>
4.1. The Ratings form.....	42
4.1.1. <i>Asset Rating tab</i> .....	42
4.2. SBEM Output reports .....	53
4.2.1. <i>SBEM Main Output Document</i> .....	54
4.2.2. <i>Data Reflection Report – Actual Building</i> .....	54
4.2.3. <i>Data Reflection Report – Notional Building</i> .....	54
4.2.4. <i>Technical Output Report – Actual Building</i> .....	54
4.2.5. <i>Technical Output Report – Notional Building</i> .....	54
4.2.6. <i>Energy Performance Certificate</i> .....	54
4.2.7. <i>Recommendations Report</i> .....	55
4.2.8. <i>Technical Output Report – Reference Building</i> .....	56
4.2.9. <i>SBEM Secondary Recommendations Report</i> .....	56
4.2.10. <i>Accessing the reports from the project folder</i> .....	57

<b>APPENDIX A:</b>	<b>Sample Output Reports .....</b>	<b>60</b>
A.1.	<i>Sample Energy Performance Certificate.....</i>	<i>60</i>
A.2.	<i>Recommendations Report for Example Building.....</i>	<i>62</i>
A.3.	<i>Sample SBEM Secondary Recommendations Report.....</i>	<i>69</i>
A.4.	<i>Sample Energy Performance Certificate for Scotland .....</i>	<i>73</i>
<b>APPENDIX B:</b>	<b>List of parameters required by iSBEM for EPC calculations..</b>	<b>74</b>
<b>APPENDIX C:</b>	<b>Connection to the National Register.....</b>	<b>84</b>
<b>APPENDIX D:</b>	<b>Agreed convention for decision on assessment level.....</b>	<b>85</b>
<b>APPENDIX E:</b>	<b>Agreed convention for determining dimensions .....</b>	<b>88</b>

DRAFT

## List of Figures

Figure 1: The Local Area Network (LAN) Settings sub-tab .....	13
Figure 2: The General Information tab in the General form .....	14
Figure 3: The Additional project details sub-tab of the General Information tab in the General form.....	16
Figure 4: The Building Details sub-tab of the General Information tab in the General form.....	17
Figure 5: The Energy Assessor Details in the General form.....	18
Figure 6: Insurance Details in the General form .....	20
Figure 7: Type of EPC for Scotland EPC for actual and potential buildings .....	21
Figure 8: General form > Potential Measures tab.....	22
Figure 9: New scenario.....	22
Figure 10: New improvement measure .....	23
Figure 11: General & Geometry sub-tab of Project tab in the Geometry form.....	25
Figure 12: A zone being defined in the General sub-tab of the Zones tab in the Geometry form.....	27
Figure 13: The tabs in the Building Services form .....	30
Figure 14: Air Conditioning Inspection sub-tab of the Global and Defaults tab in the Building Services form .....	32
Figure 15: HVAC systems definition, Heating sub-tab.....	34
Figure 16: HVAC systems definition: System Controls sub-tab .....	35
Figure 17: Defining a HWS in the General sub-tab .....	36
Figure 18: Selecting a zone's HVAC, HWS, and lighting systems.....	39
Figure 19: Defining the zone ventilation in the Ventilation sub-tab.....	40
Figure 20: Using the interface to calculate the Asset Rating for the building in the Asset Rating tab of the Ratings form for England.....	44
Figure 21: Using the interface to calculate the Asset Rating for the building in the Asset Rating tab of the Ratings form for Scotland .....	45
Figure 22: The Graphic Rating sub-tab in the Asset Rating tab of the Ratings form .....	46
Figure 23: The Recommendations sub-tab in the Asset Rating tab of the Ratings form showing an NCM recommendation .....	49
Figure 24: The Recommendations sub-tab in the Asset Rating tab of the Ratings form showing the active fields for creating a user-defined recommendation.....	50
Figure 25: The EPC Audit sub-tab in the Asset Rating tab of the Ratings form.....	51
Figure 26: The Calculation Logs sub-tab in the Asset Rating tab of the Ratings form.....	52
Figure 27: The Calculation Errors sub-tab in the Asset Rating tab of the Ratings form .....	53
Figure 28: Contents of the Projects folder showing the SBEM output reports when running SBEM for Energy Performance Certificates .....	59

## List of Tables

Table 1: Asset rating and energy bands in England, Wales, and Northern Ireland.....	10
---	----

## Acronyms used in iSBEM and this guide

AHU	Air Handling Unit
BER	Building Emission Rate
BRUKL	Building Regulations United Kingdom Part L (The Building Regulations compliance checking module)
CCHP	Combined Cooling, Heat, and Power
CEN	Comité Européen de Normalisation (The European Committee for Standardisation)
CHP	Combined Heat and Power
CO <sub>2</sub>	Carbon dioxide
ECA	Enhanced Capital Allowance
EER	Energy Efficiency Ratio
EPBD	Energy Performance of Buildings Directive
EPCgen	Energy Performance Certificate Generator (The EPC generator module)
ETL	Energy Technology List
HEPA	High Efficiency Particulate Air
HTHW	High Temperature Hot Water (boiler)
HVAC	Heating Ventilation and Air Conditioning
HWS	Hot Water System
IF	Improvement Factor
iSBEM	Interface for SBEM
LTHW	Low Temperature Hot Water (boiler)
LZC	Low or Zero Carbon
MTHW	Medium Temperature Hot Water (boiler)
NCM	National Calculation Methodology
PVS	Photovoltaic System
SBEM	Simplified Building Energy Model
SSEER	Seasonal System Energy Efficiency Ratio
SSEff	Seasonal System Efficiency
SES	Solar Energy System
SFP	Specific Fan Power
TER	Target Emission Rate
VAV	Variable Air Volume
VRF	Variable Refrigeration Flow

# 1. WHAT IS IN THIS GUIDE

## 1.1. Scope of the guide

The objective of this document is to give step-by-step guidance on the use of iSBEM for the purpose of generating energy performance certificates for non-domestic buildings in the UK.

This guide includes:

- How to work through the steps of the input procedure that are specific to EPC calculations or different to those for compliance assessments, which are described in the User Guide volume **“How to use iSBEM: Compliance Assessment - UK”**.
- How to obtain the Energy Performance Certificate and Recommendations Report.

This guide **does not** include:

- A detailed description of the structure of the NCM.
- A full definition of the reference building which is used to produce the rating required by the Energy Performance of Buildings Directive (EPBD), or the notional and typical buildings.

The above can be found in England's NCM Modelling Guide which is available from the NCM website at [www.ncm.bre.co.uk](http://www.ncm.bre.co.uk).

- A description of the contents of the NCM Construction, Glazing, or Activity databases.
- A detailed description of SBEM, the calculation engine to which iSBEM is an interface. This is described in the SBEM Technical Manual, available for download from the NCM website at [www.ncm.bre.co.uk](http://www.ncm.bre.co.uk).
- How to set up iSBEM to operate on your computer, how to assemble the required information for your own building, how to zone your building, or how to convert files created with previous versions of iSBEM version to be compatible with the current version. This can be found in the User Guide volume **“How to use iSBEM: Basics - UK”**.
- A tutorial. This can be found in the User Guide volume **“How to use iSBEM: Compliance Assessment - UK”**.
- Guidance related to energy calculations for the Republic of Ireland Building Regulations or those for the States of Jersey.

This manual is one volume in a set of documentations for the iSBEM User Guide. The other volumes in this set are as follows:

- **How to use iSBEM: (1) Basics – UK** – Contains an introduction to the use of iSBEM, an interface for SBEM (Simplified Building Energy Model) - an approach for the National Calculation Methodology (NCM) for assessing the energy performance of buildings.
- **How to use iSBEM: (2) Compliance Assessment – UK** - Contains step-by-step guidance on the use of iSBEM for the purpose of assessing compliance with the building regulations in the UK for non-domestic buildings.



## 2. CALCULATION BASICS

### 2.1. UK Energy Performance Certificate purposes

The calculation procedure required by the NCM is explained more fully in the National Calculation Methodology Modelling Guide. SBEM complies with the NCM. It is suitable for use with the majority of buildings, but some designs will contain features that mean that more accurate energy calculations may be obtained by more sophisticated calculation methods.

This section briefly defines the “reference” building, which is the basis of setting the energy rating scale for Energy Performance Certificates (EPCs) for England, Wales, and Northern Ireland. The “Asset Rating” rates the CO<sub>2</sub> emissions from the actual building in comparison to a Standard Emission Rate (SER), where both emission values are in kgCO<sub>2</sub>/m<sup>2</sup>.annum. The Standard Emission Rate is determined by applying a fixed improvement factor to the emissions from a reference building, which is defined below.

EPCs are intended to send market signals about the relative performance of comparable buildings, and so it is necessary that the reference building should be the same for all buildings of a given type. In order to provide this consistency, the reference building must be the same irrespective of: (a) whether the actual building is naturally ventilated or air conditioned and (b) the fuel choice in the actual building.

The insulation levels and HVAC efficiencies in the reference building are identical to the 2006 Part L notional building except that certain parameters in the reference building are fixed (subject to conditions below) irrespective of features in the actual building (please refer to the 2013 NCM Modelling Guide, available from [www.ncm.bre.co.uk](http://www.ncm.bre.co.uk), for the detailed description of the reference building). These aspects are:

- a. The heating and hot water service is always met by a gas-fired system irrespective of whether a fuel other than gas is used in the actual building, or is even available in the locality of the actual building.
- b. The spaces in the reference building have a fixed servicing strategy regardless of the strategy adopted in the actual building (except if the corresponding space in the actual building is unconditioned – see below). Therefore:
  - Each space is heated to the heating setpoints defined in the activity database, irrespective of whether the particular space in the actual building has heating provision or not (except if the corresponding space in the actual building is totally unconditioned – see below).
  - Each space is cooled, to a fixed cooling setpoint, irrespective of whether the particular space in the actual building has cooling provision or not (except if the corresponding space in the actual building is totally unconditioned – see below).
  - Each space which is unconditioned, i.e., unheated and uncooled, in the actual building will also be unconditioned in the reference building.
  - Each space is naturally ventilated, irrespective of whether the corresponding space in the actual building has natural or mechanical ventilation.

The CO<sub>2</sub> emissions arising from the use of the fixed building services in the reference building (in kgCO<sub>2</sub>/m<sup>2</sup>.annum) are calculated (the Reference Emission Rate or RER), and then adjusted by an improvement factor of 23.5%. This adjusted CO<sub>2</sub> emission rate (in kgCO<sub>2</sub>/m<sup>2</sup>.annum) is termed the Standard Emission Rate (SER), i.e.,  $SER = RER \times 0.765$ .

It is not intended that the definition of the reference building should change as Part L standards change, since this would mean that the energy rating of a given building would also change, even if its energy efficiency had not been varied. Therefore, the reference building is always as

defined above (please refer to the 2013 NCM Modelling Guide, available from [www.ncm.bre.co.uk](http://www.ncm.bre.co.uk), for the detailed description of the reference building).

The Asset Rating (AR) in England, Wales, and Northern Ireland is simply the ratio of the CQ emissions from the actual building (i.e., the BER) to the Standard Emission Rate (i.e., the SER) multiplied by 50. The AR should be rounded to the nearest whole number.

$$\frac{BER}{SER} * 50 = AR$$

The Asset Rating is also converted into an energy band/grade on a linear “A-G” scale (with A+ being the most efficient followed by A, and G being the least efficient), Table 1, where the border between grade B and grade C is set at the SER and given an AR of 50. This means that a gas-heated building with mixed-mode cooling that is just compliant with Part L 2006 would have an Asset Rating of 50.

$AR < 0.0 \Rightarrow A+$
$0.0 \leq AR \leq 25.0 \Rightarrow A$
$25.0 < AR \leq 50.0 \Rightarrow B$
$50.0 < AR \leq 75.0 \Rightarrow C$
$75.0 < AR \leq 100.0 \Rightarrow D$
$100.0 < AR \leq 125.0 \Rightarrow E$
$125.0 < AR \leq 150.0 \Rightarrow F$
$150.0 < AR \Rightarrow G$

**Table 1: Asset rating and energy bands in England, Wales, and Northern Ireland**

More details on the calculation procedure required by the NCM and the definition of the rating scale are explained in more detail in the NCM Modelling Guide (available from [www.ncm.bre.co.uk](http://www.ncm.bre.co.uk)).

Further information on EPCs (including the treatment of communal areas that accompany units with independent heating systems) can be found in DCLG’s publication: *‘Improving the energy efficiency of our buildings: A guide to energy performance certificates for the construction, sale and let of non-dwellings’* which can be accessed from <https://www.gov.uk/government/publications/energy-performance-certificates-for-the-construction-sale-and-let-of-non-dwellings-2>. This document provides an introduction to energy performance certificates for non-dwellings, describes the scope and requirements of the regulations that apply on construction, sale, or let, and provides guidance on how these are applied in practice.

**NB:** While no EPCs are required for permanently unconditioned buildings (i.e., buildings which do not use energy to condition the indoor climate and are expected to remain this way), it is possible to voluntarily lodge EPCs for unconditioned buildings and, as such, the definition of the reference building was revised (see above) in order to allow for the calculated energy rating for

these types of buildings to be representative. Permanently unconditioned buildings are different to those which are expected to be conditioned later on, and which should be modelled as per the guidance in DCLG's publication: *"Improving the energy efficiency of our buildings: A guide to energy performance certificates for the construction, sale, and let of non-dwellings"* which can be accessed as above. Buildings with no building services currently installed, but which are expected to be installed in the future, should be modelled in iSBEM for the purposes of producing an EPC with assumed building services of the types that are most likely to be installed in those class of buildings and which have the minimum acceptable specification standards that meet the requirements in Part L of the Building Regulations in force when the building was constructed.

**NB:** The domestic type activities available under the building type "Residential spaces" in iSBEM are to allow the energy calculations for the generation of one EPC for a building which contains residential accommodation above a non-domestic space (e.g., a shop or a pub) provided that the residential space can only be accessed from within the non-domestic space, i.e., the residential part is not designed or altered for use as a separate independent dwelling. In addition to common circulation areas of apartment buildings containing self-contained flats, these are the **only** cases where SBEM can be used to model domestic areas. For more information on the appropriate software tools to use for modelling your building, please refer to DCLG's publication: *"Improving the energy efficiency of our buildings: A guide to energy performance certificates for the construction, sale, and let of non-dwellings"* which can be accessed as above.

In Scotland, the EPC displays the approximate CO<sub>2</sub> emissions and energy usage of the building based on a standardised use of the building. The Rating is expressed as the CO<sub>2</sub> emissions in kg per m<sup>2</sup> of floor area per year (i.e., the same as BER), and it determines where the building sits on a seven band scale. The EPC also includes a list of recommendations for the cost-effective improvements (lower cost measures) of the energy performance. Further information is available from the Building Standards Division at <http://www.scotland.gov.uk/Topics/Built-Environment/Building/Building-standards>

For Northern Ireland, the EPC is very similar to that in England and Wales. Please refer to [www.dfpni.gov.uk](http://www.dfpni.gov.uk) for further information on building regulations.

## 3. ENTERING A BUILDING INTO iSBEM

This chapter takes you through each of the iSBEM data entry forms consecutively (the *General*, *Project Database*, *Geometry*, and *Building Services* forms), giving guidance on what information is required at each stage, wherever it is different to, or in addition to, that required for compliance assessments as described in the in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### 3.1. Important note on the default values in iSBEM

In iSBEM, there are default values included for various parameters. For example, there are default seasonal efficiencies for HVAC systems and default constructions for envelope elements so that you can select them when defining the envelopes of a zone when learning how to use the tool. These default values are not generous (i.e., usually pessimistic), should be checked by the user, and, if appropriate, changed or added to.

**NB:** If none of the default values in iSBEM are changed when modelling a new building, it is likely that the building will achieve a poor asset rating.

### 3.2. General form

The *General* form contains two tabs:

- **File Options** tab
- **General Information** tab

#### 3.2.1. File Options tab

The *File Options* tab has five sub-tabs:

- **File Operations** sub-tab.
- **System Configuration** sub-tab.
- **System Configuration (cont.)** sub-tab.
- **Local Area Network (LAN) Settings** sub-tab.
- **Helpline Diagnosis** sub-tab.

#### **File Operations sub-tab:**

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### **System Configuration sub-tab:**

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### **System Configuration (cont.) sub-tab:**

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### Local Area Network (LAN) Settings sub-tab:

In this sub-tab, the following information can be entered (Figure 1):

#### Proxy Server

1. Tick box to indicate whether a proxy server is used (by a Local Area Network) for connecting your computer to the Internet. If the box is ticked, i.e., a proxy server is used, then the following fields become active:
  - a. Address - the URL address of the proxy server used.
  - b. Port - the port of the proxy server used.
  - c. Tick box to indicate whether the proxy server requires a password. If the box is ticked, then the following field becomes active:
    - i. User name – the user name for the proxy server.
    - ii. Password – the password for the proxy server.

**NB:** All information on the proxy server, if one is used, should be available from your IT Department.

**NB:** Please note that in order to generate the XML message for official lodgement in England, Wales, and Northern Ireland, your computer **must** be connected to the internet, and you need to enter your assessor number into the *General* form > *General Information* tab > *Energy Assessor Details* sub-tab > *Energy Assessor Details* sub-form (see Section 3.2.2: General Information tab). If there is no internet connection, then the XML message will not be generated. Please note that the EPC and Recommendations Report produced on your computer will always contain the watermark. However, this does not apply if 'EPC Scotland' has been selected as the "Purpose of Analysis", when the XML is always generated if the calculation runs successfully, and the EPC documents generated on your computer are not watermarked.

**NB:** See APPENDIX C: Connection to the National Register, for more guidance and troubleshooting steps.

The screenshot displays the 'Local Area Network (LAN) Settings' sub-tab within the iSBEM software interface. The window features a menu bar at the top with options: General, Project Database, Geometry, Building Services, Ratings, Building Navigation, and About iSBEM. Below the menu bar, there is a 'File Options' tab and a 'General Information' sub-tab. The 'Actions' section includes a help icon and a list of tabs: File operations, System configuration, System configuration (cont), Local Area Network (LAN) Settings (which is currently selected), and Helpline diagnosis. The 'Proxy Server' section contains a checkbox labeled 'Use a proxy server for your LAN'. Below this checkbox are several input fields: 'Address' with a placeholder 'Insert\_Proxy\_Address\_Here', 'Port' with a placeholder 'Proxy\_Port', and a checkbox labeled 'Tick if Proxy Server requires password'. If this checkbox is ticked, there are additional fields for 'User name' (placeholder 'username') and 'Password' (placeholder 'password').

Figure 1: The Local Area Network (LAN) Settings sub-tab

### Helpline Diagnosis sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume “**How to use iSBEM: Compliance Assessment - UK**”.

### 3.2.2. General Information tab

The *General Information* tab contains a few sub-tabs, as described below, where you can enter as much or as little background information about the project. However, there are also essential parameters to be selected, such as the weather location for the project and the purpose of the analysis. These details can be entered and edited in their respective tabs (see Figure 2). Some of this information may have already been entered when the project was first created (see the User Guide volume “**How to use iSBEM: Basics - UK**”).

The *General Information* tab contains the following sub-tabs:

- **Project Details** sub-tab.
- **Additional Project Details** sub-tab.
- **Special Considerations** sub-tab.
- **EPBD Recast** sub-tab.
- **Building Details** sub-tab.
- **Certifier Details OR Energy Assessor Details OR Agent Details OR Qualified/Accredited Person** sub-tab.
- **Owner Details** sub-tab.

General Project Database Geometry Building Services Ratings Building Navigation About iSBEM

File Options General Information

Basic information about Project, Owner and Energy Assessor ?

Project details Additional project details Special considerations EPBD Recast Building details Energy Assessor details Owner details

Building Regulation, Bye-Laws & EPBD parameters

Purpose of the analysis EPC England

☐ Tick to produce EPC in Welsh language

☐ Tick to additionally check Building Regulations

Weather (location) London

Stage of analysis As built

☐ Tick if the building is a Shell and Core building

Project complexity Level 3

Figure 2: The General Information tab in the General form

### Project Details sub-tab:

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **"How to use iSBEM: Compliance Assessment - UK"**.

In this sub-tab, the following information can be entered (Figure 2):

#### *Building Regulations & EPBD Parameters*

1. Purpose of the analysis – purpose for carrying out a calculation using SBEM, whether it is to generate an Energy Performance Certificate in England or any other country in the UK, e.g., EPC England.
2. Type of EPC – whether the model created is for the Actual building (building as currently is) or the Potential building (building with potential improvements). This parameter is active only if the "Purpose of Analysis" parameter is set to 'EPC Scotland' in order to enable the assessor to create a scenario (similar to the process applied in the Green Deal Tool) which features the selected improvements so that the tool can calculate the potential asset rating which appears on the Scotland EPC.

**NB:** If the Energy Assessor wants the potential asset rating to be populated on the Scotland EPC and its XML file, a scenario for the potential building with the recommended improvements needs to be created and run successfully as described in Section 3.2.3: Obtaining Potential Asset Rating for EPC Scotland.

**NB:** SBEM now automatically calculates the comparative England asset rating and reports it on the XML file for Scotland EPC.

3. Tick box to indicate whether you wish to produce the EPC in Welsh as well as in English – This parameter is active only if the "Purpose of Analysis" parameter is set to 'EPC Wales'.
4. Tick box to indicate whether, in addition to producing an EPC, you wish to check compliance with Building Regulations and produce a compliance document.
5. Stage of analysis – Only the option "as built" is available when the purpose of analysis is generating an EPC.
6. Project complexity – complexity of the building for the purposes of energy assessments for EPCs. The options available are:
  - 'Level 3' – simple, existing buildings that can be modelled using SBEM, e.g., small buildings such as converted houses or doctors' surgeries.
  - 'Level 4' – new and existing buildings that can be modelled using SBEM, e.g., small purpose built office buildings.
  - 'Level 5' – new and existing complex buildings that need to be modelled using Dynamic Simulation Models (DSMs), e.g., large office buildings or factories.

The decision of which level of assessor should be assigned to a particular building should follow the agreed convention flow chart in APPENDIX D:.

**NB:** If in doubt about whether iSBEM would be appropriate for modelling your building, please contact your Accreditation Scheme Provider.

7. Main renewable source – Select to either let SBEM determine the main renewable source to appear on the Scottish EPC based on the input parameters and the calculated results (select "From calculation"), or to display 'Other non-calculated' on the EPC to denote that the main renewable source is of a type that cannot currently be modelled in SBEM. This parameter is active only if the Scottish EPC is selected in the "Purpose of the Analysis" parameter above.

The screenshot shows the iSBEM software interface. At the top, there is a navigation bar with tabs: General, Project Database, Geometry, Building Services, Ratings, Building Navigation, and About iSBEM. Below this, there is a sub-navigation bar with 'File Options' and 'General Information'. The 'General Information' tab is active, and within it, the 'Additional project details' sub-tab is selected. The sub-tab contains a form with two dropdown menus: 'Related party disclosure' and 'Transaction type'. The 'Related party disclosure' dropdown is set to 'Not related to the owner', and the 'Transaction type' dropdown is set to 'Mandatory issue (Marketed sale)'. There is also a help icon (?) in the top right corner of the sub-tab area.

**Figure 3: The Additional project details sub-tab of the General Information tab in the General form**

#### **Additional Project Details sub-tab:**

In this sub-tab, the following information can be entered (Figure 3):

1. Related party disclosure – any related party disclosure by the Energy Assessor for the purposes of energy calculations for EPCs. This parameter is active only if the “Purpose of Analysis” parameter is set to ‘EPC England’, ‘EPC Wales’, or ‘EPC Northern Ireland’. **NB:** A valid option for this parameter **must** be selected for the EPC calculation to run successfully.
2. Transaction type – the transaction type which has prompted the generation of the EPC. A valid option for this parameter **must** be selected from the drop-down menu for the EPC calculation to run successfully.



**Figure 4: The Building Details sub-tab of the General Information tab in the General form**

#### **Building Details sub-tab:**

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **"How to use iSBEM: Compliance Assessment - UK"**.

In this sub-tab (Figure 4), the following information can be entered:

##### *Building Details*

1. UPRN - the Unique Property Reference Number (UPRN) of the building. In England, Wales, and Northern Ireland, this parameter consists of 12 digits while in Scotland, it consists of 10 digits. It should not be left blank.
2. Access restriction - Specifies if any restrictions are to be imposed on the retrieval of the EPC's XML file from the National Register in Scotland. This parameter is active only if the Scottish EPC is selected in the "Purpose of the Analysis" parameter.
3. Inspection Date – the date on which the energy assessor inspected the building for the purposes of energy calculations for EPCs.
4. Tick box to indicate whether the building has a special conservation status (i.e., the building has been identified as being: one of special architectural or historical interest, in a conservation area, in a designated area of special character or appearance, or of traditional construction) - This parameter is active only if the "Purpose of Analysis" parameter is set to 'EPC England', 'EPC Wales', or 'EPC Northern Ireland'.

#### **Energy Assessor Details / Qualified/Accredited Person Details sub-tab:**

The name of this sub-tab changes depending on the option selected in the parameter "Purpose of Analysis" in the *Projects Details* sub-tab, as follows:

- **Energy Assessor Details** sub-tab – if the option selected is 'EPC England', 'EPC Wales', or 'EPC Northern Ireland'.
- **Qualified/Accredited Person Details** sub-tab – if the option selected is 'EPC Scotland'.

This sub-tab (Figure 5) contains two sub-forms: *Energy Assessor Details* sub-form and *Insurance Details* sub-form.

The screenshot shows the 'General' tab of the iSBEM software. The 'Energy Assessor Details' sub-form is active, displaying various input fields for the assessor's information. The fields include Name, Address, City, Postal Code, Telephone number, Email, Accreditation scheme, Assessor number, Qualifications, Emp/Trading name, Emp/Trading address, and Assessor Comp. No. There are also buttons for 'Import details from mdb' and 'Clear all'.

**Figure 5: The Energy Assessor Details in the General form**

**Energy Assessor Details sub-form:** in this sub-form, the following information can be entered:

1. Name – of the energy assessor or qualified/accredited person.**NB:** The input should be as you want it to appear in the XML file and lodged EPC.
2. Address – of the energy assessor or qualified/accredited person.**NB:** The input should be as you want it to appear in the XML file and lodged EPC.
3. City – of the energy assessor or qualified/accredited person.**NB:** The input should be as you want it to appear in the XML file and lodged EPC.
4. Post Code – of the energy assessor or qualified/accredited person.**NB:** The input should be as you want it to appear in the XML file and lodged EPC.
5. Telephone number – of the energy assessor or qualified/accredited person.
6. Email address – of the energy assessor or qualified/accredited person.
7. Accreditation Scheme – the name of the Accreditation Scheme to which the energy assessor belongs. For energy assessors accredited with more than one scheme, the scheme name you input here should correspond to the Assessor Number you input below.
8. Assessor number – the registration number of the energy assessor within his Accreditation Scheme. This parameter must consist of 4 letters followed by 6 digits, and it should not be left blank. For energy assessors accredited with more than one scheme, the assessor number you input here should correspond to the name of the Accreditation Scheme you input above. **NB:** The input should be exactly as on the National Register of non-domestic Energy Assessors ([www.ndepcregister.com](http://www.ndepcregister.com) for England & Wales and [www.epbniregisternd.com](http://www.epbniregisternd.com) for Northern Ireland). If in doubt, please contact your Accreditation Scheme Provider.

9. Qualifications – the qualifications of the energy assessor as they will need to be qualified for the type of building being assessed (check with your Accreditation Scheme Provider). This parameter is active only if the “Purpose of Analysis” parameter is set to ‘EPC England’, ‘EPC Wales’, or ‘EPC Northern Ireland’. See the “Project complexity” parameter in the *General Information* tab.
10. Emp/Trading Name – the employer or the trading name of the energy assessor. This parameter is active only if the “Purpose of Analysis” parameter is set to ‘EPC England’, ‘EPC Wales’, or ‘EPC Northern Ireland’. **NB:** The input should be exactly as you want it to appear in the XML file and lodged EPC.
11. Emp/Trading Address – the employer or the trading address of the energy assessor. This parameter is active only if the “Purpose of Analysis” parameter is set to ‘EPC England’, ‘EPC Wales’, or ‘EPC Northern Ireland’. **NB:** The input should be exactly as you want it to appear in the XML file and lodged EPC.

**NB:** See APPENDIX C: Connection to the National Register, for more guidance and troubleshooting steps.

**NB:** Please note that in order to generate the XML message for official lodgement in England, Wales, and Northern Ireland, your computer must be connected to the internet, and you should enter your assessor number into the *General* form > *General Information* tab > *Energy Assessor Details* sub-tab > *Energy Assessor Details* sub-form (see Section 3.2.2: General Information tab). If there is no internet connection, then the XML message will not be generated. Please note that the EPC and Recommendations Report produced on your computer will always contain the watermark. However, this does not apply if ‘EPC Scotland’ has been selected as the “Purpose of Analysis”, when the XML is always generated if the calculation runs successfully, and the EPC documents generated on your computer are not watermarked

**IMPORTANT:** Energy Assessors should now input their full details (name, address, qualifications, name of Accreditation Scheme Provider, trading name, etc.) in the interface exactly as they want them to appear in the XML file and on the lodged EPC, as well as their assessor number. This is because the new verification system will **not** overwrite these details with information from the National Register.

12. Membership Number – the membership number of the qualified/accredited person. This parameter is active only if the “Purpose of Analysis” parameter is set to ‘EPC Scotland’.
13. Protocol Organisation – the accreditation scheme of the qualified/accredited person. This parameter is active only if the “Purpose of Analysis” parameter is set to ‘EPC Scotland’.

**Import Details** – clicking on either of the two buttons available will enable you to import the assessor details which you might have entered in a previous version of iSBEM, instead of re-typing them. After you click on the button, you will have the option to browse the folders on your computer and select a previous version of iSBEM, for e.g., iSBEM\_v4.1.e.mdb, from which to import the previously input details into the version of iSBEM you are working with.

If you are importing details from a version of iSBEM specifically for MS Office 2003, use the “Import details from mdb” button to import your details from an “.mdb” file. If you are importing details from a version of iSBEM specifically for MS Office 2007, use the “Import details from accdb” button to import your details from an “.accdb” file.

**NB:** If you are running the Office 2007 version of iSBEM, you can import assessor details from an Office 2003 or an Office 2007 version of iSBEM, i.e., 2 buttons will be visible in the interface for “mdb” and “accdb” files, respectively. On the other hand, if you are running the Office 2003 version of iSBEM, you can import details from a previous Office 2003 version of iSBEM only, i.e., only 1 button for “mdb” files will be visible in the interface.

**Clear all** – All the information in the *Energy Assessor Details / Qualified/Accredited Person Details* sub-tab will remain visible in any new project created but can be cleared by pressing the “Clear all” button.

The screenshot shows the iSBEM software interface. At the top, there are tabs: General, Project Database, Geometry, Building Services, Ratings, Building Navigation, and About iSBEM. Below these, there are sub-tabs: File Options and General Information. The General Information sub-tab is active, showing a section titled 'Basic information about Project, Owner and Energy Assessor'. Within this section, there are sub-tabs: Project details, Special considerations, EPBD Recast, Building details, Energy Assessor details, and Owner details. The Energy Assessor details sub-tab is active, showing a sub-form titled 'Insurance details'. This sub-form contains the following fields: Insurer company (text input), Policy number (text input), Effective date (date input with a 'Calendar' button), Expiry date (date input with a 'Calendar' button), and PI Limit (text input). A 'Clear all' button is located at the bottom right of the sub-form.

**Figure 6: Insurance Details in the General form**

**Insurance Details sub-form:** This is where the following information can be entered:

1. Insurer Company – Name of the energy assessor’s insurance company.**NB:** The text input in this field should not include any double quotes.
2. Policy Number – The energy assessor’s insurance policy number.
3. Effective Date – The energy assessor’s insurance policy effective start date.
4. Expiry Date – The energy assessor’s insurance policy expiry date.
5. PI Limit – The energy assessor’s insurance policy cover limit.

#### **Owner Details sub-tab:**

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.2.3. Obtaining Potential Asset Rating for EPC Scotland**

In order to obtain the potential asset rating for a Scotland EPC, the assessor will need to have first run the EPC calculation to obtain the asset rating for the building as it currently is, i.e., with the EPC Type parameter in the *General* form > *General Information* tab > *Project details* sub-tab set to “Actual” (see Figure 7).

**General Project Database Geometry Building Services Ratings Building Navigation About iSBEM**

**ACTUAL SCOTLAND EPC**

File Options General Information

**Basic information about Project, Owner and Agent** ?

Project details Additional project details Special considerations EPBD Recast Building details Qualified / Accredited Person details

Building Regulation, Bye-Laws & EPBD parameters

Purpose of the analysis: EPC Scotland

Type of EPC: Actual ←

☐ Tick to additionally check Building Regulations

Weather (location): Scotland

Stage of analysis: As built

SB type of building: Other buildings

Only for Nat. Vent. buildings: ☐ Occupied period temperature always below 28°C

Main renewable source: From calculation

☒ Tick if mains gas supply is available to development site

**Actual** = EPC for building as currently is

**Potential** = EPC for building with selected recommended improvements

**Figure 7: Type of EPC for Scotland EPC for actual and potential buildings**

In order to generate the potential asset rating with the recommended improvements, this will necessitate creating a scenario in iSBEM and then implementing the selected improvements to the building model. The format of the software tool in this mode is very similar to that used for Green Deal assessments in the GDTool ([www.ncm-sbem.org.uk](http://www.ncm-sbem.org.uk)) so should be familiar to assessors who have undergone Green Deal training.





**To create a scenario of recommended improvements in iSBEM:**

1. Set the "Type of EPC" parameter to "Potential" in the *General* form > *General Information* tab > *Project details* sub-tab (see Figure 7). This action causes a new tab entitled *Potential Measures* to appear in the *General* form (see Figure 8).
2. From the "Record selector" drop-down menu in the *Potential Measures* tab, select the option "Create new Scenario based on BASELINE". This will create a copy of the baseline building model, i.e., the building as-is, on which the assessor can make alterations to add improvement measures while leaving the original baseline model unaffected.
3. The 'Scenario copy' is assigned the name "New Scenario" by default, but the name can be changed by editing the text within the "Name" field (see Figure 9). A short description may also be entered in the "Description" field explaining what changes will be introduced and assessed, but this is not obligatory. Notice that the name of the scenario the user is working on is shown at the top left hand side of the *General* form in green text for reference.
4. To create an improvement measure, in the *General* form > *Potential Measures* tab > *Improvements* sub-tab, input a name for the improvement measure within the "New Measure" field, and click on the **Create** button. Notice that the name of the measure will appear at the top of the form in green text for reference. A short description of the measure may also be entered in the "Description" field, such as what change it entails (see Figure 10).

General Project Database Geometry Building Services Ratings Building Navigation About iSBEM

**ACTUAL SCOTLAND EPC**

File Options General Information Potential Measures

Record selector     

General Improvements

Select action or SCENARIO from the list

Create new Scenario based on BASELINE

Name

Based on scenario  Created on

Description








Record: 1 of 1    No Filter Search

 Figure 8: General form > Potential Measures tab

General Project Database Geometry Building Services Ratings Building Navigation About iSBEM

**New Scenario**

File Options General Information Potential Measures

Record selector **New Scenario**     

General Improvements

Name

Based on scenario  Created on

Description


 
 
Record: 1 of 1    No Filter Search

 Figure 9: New scenario



The screenshot displays the 'New Scenario' form in the iSBEM software. At the top, there are navigation tabs: 'General', 'Project Database', 'Geometry', 'Building Services', 'Ratings', 'Building Navigation', and 'About iSBEM'. Below these, the 'New Scenario' section is active, with sub-tabs for 'File Options', 'General Information', and 'Potential Measures'. The 'General' sub-tab is selected, showing a 'Record selector' set to 'New Scenario'. The main form area has a 'General' tab and an 'Improvements' tab. The 'General' tab contains a 'New Measure' section with a 'Measure 1' title and a 'Create' button. Below this, there are fields for 'NAME' (Measure 1) and 'DESCRIPTION' (Replace T8 lamps with T5). A 'Delete Measure' button is also present. To the right, there is a table for energy performance metrics (kWh/m2) with columns for Heating, Cooling, Auxiliary Lighting, and Hot Water. The 'Improved' row shows values for these metrics, and the 'Created ON' timestamp is 15/01/2014 14:18:41. The bottom of the form features record navigation controls, including 'Record: 1 of 1', 'No Filter', and a 'Search' button.

Figure 10: New improvement measure

5. At this point, the assessor should go to the relevant section in iSBEM in order to make the change to the building model that is relevant to the improvement measure just created. For example, if the measure is for changing T8 lamps to T5 lamps, the assessor should go to the *Building Services* form > *Zones* tab > *Lighting* sub-tab, and change the lamp types of all the zones which have T8 to T5. If the recommended improvement is to upgrade single-glazed windows to double-glazing, the assessor should go to the *Project Database* form > *Glazing* tab > *General* sub-tab and modify the definition of the glazing type which is assigned to those windows. If the recommended improvement is for adding a PV system, then the assessor should go to the *Building Services* form > *PVS* tab > *General* sub-tab, and enter the definition of the PV system in order to add it to the building model, and so on.
6. Once the building model has been modified with the recommended improvement measures, the impact on the energy performance of the building and its CQ emissions can be assessed. In the *Ratings* form, click on the **Calculate EPC rating** button (see section 4.1.1: Asset Rating tab) to initiate the calculation of the building's performance with the improvement scenario (containing all the recommended improvement measures in a single package).
7. After the calculation has completed successfully, the potential asset rating for the building with the recommended improvements will appear in the relevant section on the actual building's EPC which is generated on the user's computer, and it will also be recorded on the generated XML file so that it can appear on the official EPC generated at the Scottish National Register after lodgement.

### 3.3. Project Database form

Guidance on input in this form is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### 3.4. Geometry form

Guidance on input parameters in this form not described below is the same as that provided in the User Guide volume **"How to use iSBEM: Compliance Assessment - UK"**.

#### 3.4.1. Project tab

This tab consists of the following two sub-tabs:

- **General & Geometry** sub-tab
- **Thermal Bridges** sub-tab

##### **General & Geometry sub-tab:**

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **"How to use iSBEM: Compliance Assessment - UK"**.

This sub-tab requires the input of the following information, as shown in Figure 11:

##### *Building Infiltration (Global)*

1. Air permeability at 50 pa ( $\text{m}^3/\text{h}.\text{m}^2$ ) - If the purpose of analysis option that has been selected in the *General* form > *General Information* tab > *Project Details* sub-tab is EPC generation, then iSBEM's default value for air permeability will be  $25 \text{ m}^3/\text{h}.\text{m}^2$ . However, the user can over-write the default value by manually entering an alternative value.

##### **Convention: For EPCs - Air permeability**

To accommodate different ages and types of building where the SBEM default value of  $25 \text{ m}^3/\text{h}.\text{m}^2$  for all existing buildings has been viewed as unduly restrictive, the value shall be amended as follows:

- Less than  $10 \text{ m}^3/\text{h}.\text{m}^2$  – only with an accredited air pressure test result
- $10 \text{ m}^3/\text{h}.\text{m}^2$  – buildings with total floor area >  $500 \text{ m}^2$ , built to 2002 Building Regulations
- $15 \text{ m}^3/\text{h}.\text{m}^2$  – buildings with total floor area  $\leq 500 \text{ m}^2$ , built to 2002 Building Regulations and buildings built to 1995 Building Regulations
- $25 \text{ m}^3/\text{h}.\text{m}^2$  – buildings built to Building Regulations pre 1995
- $35 \text{ m}^3/\text{h}.\text{m}^2$  – to be considered where buildings are pre 1995 regulations and where suitable evidence of high permeability exists, e.g., single skin metal-clad structure within "Planning Use Class B2 – B8" with large roller shutter doors and poor constructional details, etc.



Figure 11: General & Geometry sub-tab of Project tab in the Geometry form

#### Thermal bridges sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### 3.4.2. Defining zones – Zones tab

Guidance on input parameters in this tab not described below is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

**NB:** For building regulations calculations purposes, we recommend that users generally avoid creating more than 100-150 zones in iSBEM. However, the processing time will depend on the total number of objects (not just zones), i.e., zones, envelopes, windows, etc. Note that for the asset rating to be calculated for an EPC, 3 buildings need to be generated: actual, notional, and reference (typical is based on the notional building's performance), i.e., all the objects in the input are multiplied by 3 to give the total number of objects being processed by SBEM. Hence, creating a project with a very large number of objects will slow down the calculation and may cause it to crash.

The *Zones* tab contains four sub-tabs:

- **General** sub-tab.
- **Quick Envelopes** sub-tab.
- **Thermal bridges** sub-tab.
- **Envelope Summary** sub-tab.

### General sub-tab:

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **"How to use iSBEM: Compliance Assessment - UK"**.

To create a zone, you will need to click into the *General* sub-tab of the *Zones* tab, add a new record, and enter the following information:

1. HVAC System – If you have defined your HVAC systems before defining your zones (i.e., if you have started with the *Building Services* form instead of the *Geometry* form), you can select the HVAC system that serves this zone from the drop-down list. If no HVAC system serves the space (i.e., an unconditioned zone that is intended to remain that way), select 'Zones without HVAC system' (spaces which have no heating or cooling, e.g., plant rooms, storage spaces, exposed circulation spaces). If you have not yet defined your HVAC system, this can be left as 'Unassigned' at this stage. You will be able to assign the zones to an HVAC system later within the *Building Services* form so there is no need to define the HVAC system before continuing. If you leave the zone as unassigned, a red warning will appear in the top right hand corner to let you know how many zones remain unassigned so that you would not proceed with running the calculation before assigning them.

**NB:** If a zone is defined as having no heating or cooling, i.e., assigned to 'Zones without HVAC system', but the activity type selected for the zone is one which typically requires conditioning (according to the Activity Database), a red exclamation mark "!" will appear next to this parameter as a warning to the user, in case this was done in error. Ultimately, however, the calculation will be carried out using the data input by the user.

If you do not know the type of the HVAC system in your existing building or its detailed parameters when modelling a building for an EPC calculation, you should select one of the following default options from the drop-down menu (see Section 3.5: Building Services form):

- 'Heating only - Electric resistance' - Heat generated by passing an electric current through resistance wire. Assumed to be electric central heating system with warm air distribution. Fan storage heaters and electric fan converters should be input by defining an HVAC system in the *Building Services* form > *HVAC Systems* tab > *General* sub-tab and selecting the system type "Other local room heater - fanned". If you do not know the heating method (i.e., whether a heated-only building uses electricity or a fuel-based heating system), you should select electric resistance heating as your default.
- 'Heating only - Other systems' - Assumed to be a wet radiator system with heat generated by fuel combustion. Pumps assumed to be powered by grid-supplied electricity. If you know the fuel type used by the heating system, you can define it in the *Building Services* form > *Global and Defaults* tab > *HVAC System Defaults* sub-tab (see Section 3.5.1: Global and Defaults tab).
- 'Heating and mechanical cooling' - Assumed to be a constant volume air system with terminal reheat and fixed fresh air. Refrigeration (chillers), fans, and pumps assumed to be powered by grid-supplied electricity. If you know the fuel type used by the heating system, you can define it in the *Building Services* form > *Global and Defaults* tab > *HVAC System Defaults* sub-tab (see Section 3.5.1: Global and Defaults tab).

**NB:** The default HVAC systems in iSBEM are representative of existing rather than new buildings and should only be used if you are running an EPC calculation for an existing building (not a new building) and do not know the type of the HVAC system in your building or its detailed parameters as the default efficiencies assumed by iSBEM for them are quite pessimistic and cannot be edited by the user.

**NB:** The domestic type activities available under the building type "Residential spaces" in iSBEM are to allow the energy calculations for the generation of one EPC for a building which

contains residential accommodation above a non-domestic space (e.g., a shop or a pub) provided that the residential space can only be accessed from within the non-domestic space, i.e., the residential part is not designed or altered for use as a separate independent dwelling. In addition to common circulation areas of apartment buildings containing self-contained flats, these are the **only** cases where SBEM can be used to model domestic areas. For more information on the appropriate software tools to use for modelling your building, please refer to DCLG's publication: "*Improving the energy efficiency of our buildings: A guide to energy performance certificates for the construction, sale, and let of non-dwellings*" which can be accessed from DCLG's website at <https://www.gov.uk/government/publications/energy-performance-certificates-for-the-construction-sale-and-let-of-non-dwellings--2>

#### Infiltration

- Air permeability at 50pa, in  $\text{m}^3/\text{h.m}^2$  - If the purpose of analysis option that has been selected in the *General* form > *General Information* tab > *Project Details* sub-tab is EPC generation, then iSBEM's default value for air permeability will be  $25 \text{ m}^3/\text{h.m}^2$ . However, the user can over-write the default value by manually entering an alternative value. **NB:** For EPCs of existing buildings, note that the air permeability convention given in section 3.4.1: Project tab should apply.

Figure 12 shows a zone being defined.

The screenshot displays the iSBEM software interface. At the top, there are tabs: General, Project Database, Geometry, Building Services, Ratings, Building Navigation, and About iSBEM. Below these, there are sub-tabs: Project, Zones, Envelope, Doors, and Windows & Rooflights. The 'Zones' sub-tab is active, showing a 'Zone selector' with 'z0/01east' selected. Below the selector, there are sub-tabs: General, Quick Envelopes, and Envelope Summary. The 'General' sub-tab is active, showing fields for Name (z0/01east), HVAC system (HVAC for the example building), Building Type (A3/A4/A5 Restaurant and Cafes/Drinking Establishment), Activity (Eating/drinking area), Area (162 m2), and Infiltration (Yes, Air permeability at 50pa is 3 m3/h/m2). Callouts point to various elements: 'Selected building type for this zone.' points to the Building Type dropdown; 'Selected activity type for this zone.' points to the Activity dropdown; 'Notes entered at the user's discretion about the zone.' points to the 'User's notes' text area; and 'A description of the selected activity area as it appears in the NCM Activity database.' points to the 'Description of Activity from NCM database' text area. The 'Infiltration' section has two radio buttons: 'No, use default value' (25 m3/h/m2) and 'Yes, Air permeability at 50pa is' (3 m3/h/m2). The 'Thermal Bridges' section has a checkbox 'Tick here to use Global Psi values' which is checked. At the bottom, there is a status bar showing 'Record: 14', '1 of 19', and 'Unfiltered Search'.

Figure 12: A zone being defined in the General sub-tab of the Zones tab in the Geometry form

#### Thermal Bridge sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### Envelope Summary sub-tab:

Guidance on this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### 3.4.3. Defining envelopes – Envelope tab

Guidance on input parameters in this tab not described below is the same as that provided in the User Guide volume **“How to use iSBEM: Compliance Assessment - UK”**.

The main *Envelope* tab contains two sub-tabs:

**General** sub-tab.

**Window & Door Summary** sub-tab.

#### General sub-tab:

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **“How to use iSBEM: Compliance Assessment - UK”**.

For each envelope element, you will need to click into the *General* sub-tab of the *Envelope* tab, create a new record, and add the following information:

1. Connects space to (sometimes referred to as “adjacent condition”) – Here you need to select what conditions apply on the other side of the wall/floor or ceiling/roof.

#### **Convention:** For EPCs - Adjacent condition of adjoining buildings

Unless evidence to the contrary is readily and easily available, all buildings adjoining that building or part-building which is being assessed, are assumed to be conditioned unless they are of “Planning Class B2 to B8” in which case, they are assumed to be unconditioned. This applies regardless of whether they are actually occupied or are inaccessible. This convention only applies for the assessment of EPCs.

#### **Convention:** For EPCs - Boundary of assessed building when other buildings adjoin

Where there is a party wall between buildings, this is deemed (in compliance with the RICS definition of internal areas) to be a perimeter wall, and therefore, horizontal dimensions should be measured to the inside face from the side of the building being assessed.

**NB:** If surfaces of the room are not rectilinear, for example, if a pitched roof is exposed to the inside of the conditioned zone (i.e., there is no flat ceiling underneath it), then the roof area will be that of the inner surface area of the roof as “seen” by the heat flux.

#### **Convention:** For EPCs - Dimension conventions

See APPENDIX E: for the treatment of other rooms with non-rectilinear surfaces.

#### Windows & Doors Summary sub-tab:

Guidance on this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK”**.

### 3.4.4. Defining windows and rooflights – Windows & Rooflights tab

Guidance on input in this tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK”**.

### 3.4.5. Defining doors – Doors tab

Guidance on input in this tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### 3.4.6. Quick Envelopes tab: Short cut to creating envelopes and windows

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

## 3.5. Building Services form

Guidance on input parameters in this form not described below is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

This form holds all the information relating to the building services. This information is entered into the following main tabs (these are circled in Figure 13):

- **Global and Defaults** tab – This tab contains some default information on HVAC systems if no or little information is known about the systems in the actual building. It also requires information on the electric power factor and lighting controls for the whole building.
- **HVAC systems** tab.
- **HWS** tab.
- **SES** tab.
- **PVS** tab.
- **Wind generators** tab.
- **CHP generator** tab (this tab only appears when one of the HVAC systems described in the *HVAC Systems* tab is specified as using CHP).
- **Solar collectors** tab.
- **Zones** tab.

**Building services detail for the whole Project**

HVAC System Defaults | Project building services | Air Conditioning Inspection

These should be chosen if you do not know system type or detailed parameters. If you do not know heating method (ie whether a heated-only building uses electricity or a fuel-based heating system), select electric resistance heating as your default. If you have more system information, set up another system via the HVAC systems sub-tabs.

**Zones without HVAC system**  
Should only include unconditioned spaces which have no heating or cooling, eg plant rooms, storage spaces, exposed circulation spaces.

**Heating only - Electric resistance**  
Heat generated by passing current through resistance wire. Electric central heating system with warm air distribution. Fan storage heaters and electric fan convectors should be entered on the HVAC systems/General tab as "Other local room heater - fanned".

**Heating only - other systems**  
Assumed to be wet radiator system. Heat generated by fuel combustion. Pumps assumed to be powered by grid electricity.  
Natural Gas

**Heating and mechanical cooling**  
Assumed to be constant volume air system with terminal reheat and fixed fresh air. Refrigeration (chillers), fans, pumps assumed to be powered by grid electricity.  
Natural Gas for heating  
Grid Supplied Electricity for cooling

Figure 13: The tabs in the Building Services form

### 3.5.1. Global and Defaults tab

In this tab, there are three sub-tabs:

- **HVAC System Defaults** sub-tab
- **Project Building Services** sub-tab
- **Air Conditioning Inspection** sub-tab - This sub-tab is visible only if EPC generation in England, Wales, or Northern Ireland is selected as the "Purpose of Analysis" in the *General* form > *General Information* tab > *Project Details* sub-tab.

#### HVAC System Defaults sub-tab:

If no HVAC system serves the space (i.e., an unconditioned zone), you should select the option 'Zones without HVAC system' as the HVAC system for that zone in the *Geometry* form > *Zones* tab > *General* sub-tab or the *Building Services* form > *Zones* tab > *HVAC & HW System* sub-tab (spaces which have no heating or cooling, e.g., plant rooms, storage spaces, exposed circulation spaces.). If you do not know the type of the HVAC system in your existing building or its detailed parameters, you should instead select one of the following default options from the drop-down menu (see Section 3.4.2: Defining zones – Zones tab):

- 'Heating only - Electric resistance' - Heat generated by passing an electric current through resistance wire. Assumed to be an electric central heating system with warm air distribution. Fan storage heaters and electric fan converters should be input by defining an HVAC system in the *Building Services* form > *HVAC Systems* tab > *General* sub-tab and selecting the system type "Other local room heater - fanned". If you do not know the heating method (i.e., whether a heated-only building uses electricity or a fuel-based heating system), you should select electric resistance heating as your system.

- 'Heating only - Other systems' - Assumed to be a wet radiator system where heat is generated by fuel combustion. Pumps assumed to be powered by grid-supplied electricity. If you know the fuel type used by the heating system, you can define it in this sub-tab (Figure 13).
- 'Heating and mechanical cooling' - Assumed to be a constant volume air system with terminal reheat and fixed fresh air. Refrigeration (chillers), fans, and pumps assumed to be powered by grid-supplied electricity. If you know the fuel type used by the heating system, you can define it in this sub-tab (Figure 13).



**NB:** The default HVAC systems in iSBEM are representative of existing rather than new buildings and should only be used if you are running an EPC calculation for an existing building (not a new building) and do not know the type of the HVAC system in your building or its detailed parameters as the default efficiencies assumed by iSBEM for them are quite pessimistic and cannot be edited by the user.

### Project Building Services sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### Air Conditioning Inspection sub-tab:

This sub-tab is visible only if EPC generation in England, Wales, or Northern Ireland is selected as the "Purpose of Analysis" in the *General* form > *General Information* tab > *Project Details* sub-tab. In this sub-tab, you need to enter details about the air conditioning system in the building, if applicable, as shown in Figure 14. This data is used by SBEM purely for reporting purposes (in the XML file for lodgement) and is not used during the calculation.

1. Tick box to indicate if the building has an air conditioning system. If the box is ticked, the following parameters become active:
  - a) Tick box to indicate if the total effective rated output of the air conditioning system is known.
    - If the actual output is known, the box should be unticked, and the value should be entered, in kW, into the box, which becomes active. Further guidance can be accessed by clicking on the adjacent  button.
    - If the actual output is unknown, the box should be ticked, and a value for an estimated range should be selected from the options in the drop-down menu, which becomes active. Further guidance can be accessed by clicking on the adjacent  button.
  - b) Has an air conditioning inspection been commissioned for compliance with Energy Performance of Buildings Regulations – Select an option from the drop-down menu.



Global and Defaults | HVAC systems | HWS | SES | PVS | Wind generators | CHP generator | Transpired solar collectors | Zones

**Building services detail for the whole Project** ?

HVAC System Defaults | Project building services | Air Conditioning Inspection

**Does the building have an air conditioning system?**

☒ Tick if yes

What is the total effective rated output of the air conditioning system in the building?

? 12 kW ☒ Tick this box if the actual output is unknown

What is the estimated total effective rated output of the air conditioning system?

? Greater than 250kW

Has an air conditioning inspection been commissioned for compliance with Energy Performance of Buildings regulations?

Don't know

for cooling

**Figure 14: Air Conditioning Inspection sub-tab of the Global and Defaults tab in the Building Services form**

### 3.5.2. Defining HVAC Systems – HVAC Systems tab

Guidance on input parameters in this tab not described below is the same as that provided in the User Guide volume **“How to use iSBEM: Compliance Assessment - UK”**.

The building’s HVAC system(s) is defined within the first seven sub-tabs of the *HVAC systems* tab.

- **General** sub-tab.
- **Heating** sub-tab.
- **Cooling** sub-tab.
- **Systems Adjustments** sub-tab.
- **Metering Provision** sub-tab.
- **System Controls** sub-tab: This is where heating system controls for each HVAC system can be defined..
- **Bi-valent Systems** sub-tab.
- **Zone Summary** sub-tab.

If no HVAC system serves the space (i.e., an unconditioned zone), you should select the option ‘Zones without HVAC system’ as the HVAC system for that zone in the *Geometry* form > *Zones* tab > *General* sub-tab or the *Building Services* form > *Zones* tab > *HVAC & HW System* sub-tab (spaces which have no heating or cooling, e.g., plant rooms, storage spaces, exposed circulation spaces). If you do not know the type of the HVAC system in your existing building or its detailed parameters, you should instead select one of the following default options from the drop-down menu (see Section 3.4.2: Defining zones – Zones tab):

- ‘Heating only - Electric resistance’ - Heat generated by passing an electric current through resistance wire. Assumed to be electric central heating system with warm air



distribution. Fan storage heaters and electric fan converters should be input by defining an HVAC system in the *Building Services* form > *HVAC systems* tab > *General* sub-tab and selecting the system type "Other local room heater - fanned" (see below). If you do not know the heating method (i.e., whether a heated-only building uses electricity or a fuel-based heating system), you should select electric resistance heating as your default.

- 'Heating only - Other systems' - Assumed to be a wet radiator system with heat generated by fuel combustion. Pumps assumed to be powered by grid-supplied electricity. If you know the fuel type used by the heating system, you can define it in this sub-tab (Figure 13).
- 'Heating and mechanical cooling' - Assumed to be a constant volume air system with terminal reheat and fixed fresh air. Refrigeration (chillers), fans, and pumps assumed to be powered by grid-supplied electricity. If you know the fuel type used by the heating system, you can define it in this sub-tab (Figure 13).

**NB:** The default HVAC systems in iSBEM are representative of existing rather than new buildings and should only be used if you are running an EPC calculation for an existing building (not a new building) and do not know the type of the HVAC system in your building or its detailed parameters as the default efficiencies assumed by iSBEM for them are quite pessimistic and cannot be edited by the user.

#### General sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### Heating sub-tab:

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

1. Effective heat generating seasonal efficiency - If you know the effective heat generating seasonal efficiency for the heat generator, it can be introduced manually into the interface. Otherwise, a (conservative) default value will be used by SBEM. The default seasonal efficiency value (if no efficiency is input by the user) is based on whether the generator is on the Energy Technology List (ETL) of the 'Enhanced Capital Allowance' (ECA) scheme<sup>i</sup>. If not, you then need to select whether the generator was installed in or after 1998.

**NB:** For boiler systems installed from 1998 onwards, a default seasonal efficiency of 0.81 is suggested by the tool (based on Statutory Instrument 1994 No. 3083), and for boiler systems installed before this period, a conservative default seasonal efficiency of 0.65 is suggested. Please note that from around 1989, the boiler industry began producing boilers with efficiencies that would have complied with the above statutory instrument.

#### **Convention:** For EPCs - Electric room heaters

Any form of fanned or unfanned electric 'room heater' whether panel, bar, convector, or storage heater shall have a user-input heat generating seasonal efficiency of 1 (i.e., 100% efficiency).

Figure 15 shows a heating system being defined.

---

<sup>i</sup> [www.eca.gov.uk/etl/](http://www.eca.gov.uk/etl/)

The screenshot shows the iSBEM software interface for defining HVAC systems. The top menu bar includes tabs for General, Project Database, Geometry, Building Services, Ratings, Building Navigation, and About iSBEM. Below this is a sub-menu bar with tabs for Global and Defaults, HVAC systems, HWS, SES, PVS, Wind generators, Transpired solar collectors, and Zones. The main window displays the 'Heating system' sub-tab. It features a 'Record selector' dropdown set to 'HVAC for the example building'. Below this are tabs for General, Heating, Cooling, System Adjustment, Metering Provision, System Controls, Bi-valent Systems, and Zone Summary. The 'Heating system' section includes input fields for 'Heat source' (set to 'LTHW boiler') and 'Fuel type' (set to 'Natural Gas'). There is a checkbox for 'Tick if this system also uses CHP'. Two sections ask for efficiency values: 'Do you know the effective heat generating seasonal efficiency?' with a default of 0.89, and 'Do you know the generator radiant efficiency?' with a default of 0.4. Both have radio buttons for 'No, use default value' and 'Yes, seasonal/radiant efficiency is'. A section 'Does it qualify for UK ECAs?' has a dropdown for 'ECA list (after 2001)'. Another section 'Was it installed in or after 1998?' has radio buttons for 'No' and 'Yes'. At the bottom, there is a 'Record' status bar showing '1 of 1' and a search bar.

Figure 15: HVAC systems definition, Heating sub-tab

#### Cooling sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### System Adjustments sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### Metering Provision sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### System Controls sub-tab:

The software also needs to know if you have certain controls in your heating system, which would be considered during the production of the energy efficiency recommendations to accompany the EPC. There are 5 tick boxes in this sub-tab (see Figure 16):

##### *Heating System Controls*

1. Tick box to indicate whether the heating system has central time control.
2. Tick box to indicate whether the heating system has optimum start/stop control.
3. Tick box to indicate whether the heating system has local time control (i.e., room by room).
4. Tick box to indicate whether the heating system has local temperature control (i.e., room by room).

5. Tick box to indicate whether the heating system has weather compensation control.

**NB:** The HVAC system controls defined in the *System Controls* sub-tab are used by SBEM only for generating the EPC Recommendations for the Recommendations Report and do not affect the actual energy calculations or the input value for the system efficiency.

**NB:** If you have more than one HVAC system defined in your project, the *System Controls* sub-tab will be available for each one of them, i.e., each HVAC system can have control definitions different from the others.

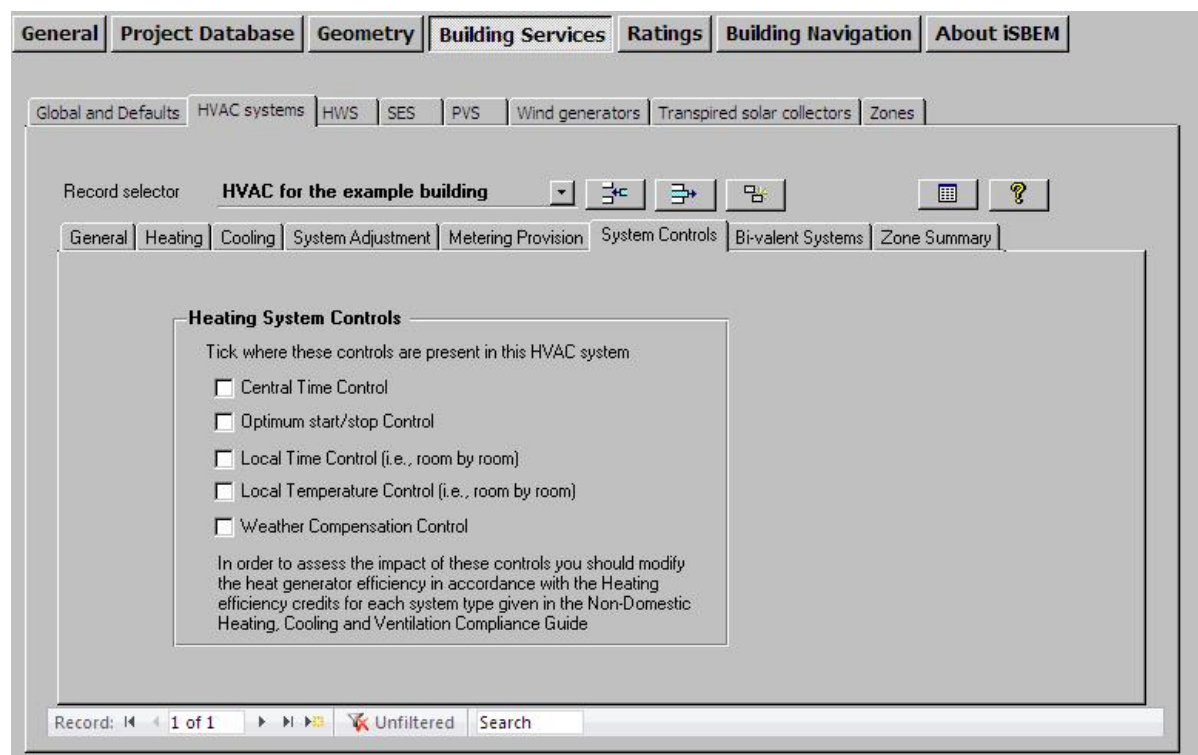


Figure 16: HVAC systems definition: System Controls sub-tab

#### Bi-valent Systems sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### Zone Summary sub-tab:

Guidance on this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### 3.5.3. Defining HWS – HWS tab

Guidance on input parameters in this tab not described below is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

The *HWS* tab has four sub-tabs:

- **General** sub-tab.

- **Storage & Secondary Circulation** sub-tab.
- **Assigned** sub-tab.
- **Bi-valent Systems** sub-tab.

### General sub-tab:

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **“How to use iSBEM: Compliance Assessment - UK”**.

A HWS is defined by the following information:

1. Is it later than 1998? - Tick if the system was installed later than 1998. The generator type selected above determines whether this tick box is enabled. Whether this box is ticked determines the default seasonal efficiency used by the tool if no value is input by the user.

**NB:** For boiler systems installed from 1998 onwards, a default seasonal efficiency of 0.81 is suggested by the tool (based on Statutory Instrument 1994 No. 3083), and for boiler systems installed before this period, a conservative default seasonal efficiency of 0.65 is suggested. Please note that from around 1989, the boiler industry began producing boilers with efficiencies that would have complied with the above statutory instrument.

2. Effective heat generating seasonal efficiency - If you know the effective heat generating seasonal efficiency for the HWS generator, it can be introduced manually into the interface. Otherwise, a default value will be used by SBEM. (This field is inactive if the HWS Generator type selected is ‘Same as HVAC’). The default value is based on the above tick box on whether the generator was installed in or later than 1998.

Figure 17 shows a HWS generator being defined.

**Figure 17: Defining a HWS in the General sub-tab**

#### **Storage & Secondary Circulation sub-tab:**

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### **Bi-valent Systems sub-tab:**

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### **Assigned sub-tab:**

Guidance on this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.5.4. Defining Solar Energy Systems (SES) – SES tab**

Guidance on input in this tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.5.5. Defining a Photovoltaic system (PVS) – PVS tab**

Guidance on input in this tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.5.6. Defining a wind generator – Wind Generators tab**

Guidance on input in this tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.5.7. Defining a CHP generator – CHP Generator tab**

Guidance on input in this tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.5.8. Defining a Solar Collector – Solar Collectors tab**

Guidance on input in this tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.5.9. Defining the zone specific building services- Zones tab**

Guidance on input parameters in this tab not described below is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

There are eight sub-tabs in the *Zones* tab:

- **HVAC and HWS Systems** sub-tab.
- **Ventilation** sub-tab.
- **Ventilation (cont)** sub-tab.
- **Exhaust** sub-tab.
- **Lighting** sub-tab.
- **Lighting Controls** sub-tab.
- **Display Lighting** sub-tab.
- **Solar Collector** sub-tab.

### **HVAC and HWS Systems sub-tab:**

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **“How to use iSBEM: Compliance Assessment - UK”**.

The sub-tab is used to specify the HVAC system and HWS for each zone. The following information is required:

#### *HVAC System Parameters*

1. HVAC Systems – Here you need to select from the drop-down list (of systems you have already defined in the *HVAC Systems* tab or the default systems) the HVAC system which serves the zone. If no HVAC system serves the space (i.e., an unconditioned zone), select ‘Zones without HVAC system’ (spaces which have no heating or cooling and will remain unconditioned, e.g., plant rooms, storage spaces, exposed circulation spaces).

If you do not know the type of the HVAC system in your existing building or its detailed parameters, you should select one of the following default options from the drop-down menu:

- ‘Heating only - Electric resistance’ - Heat generated by passing an electric current through resistance wire. Assumed to be an electric central heating system with warm air distribution. Fan storage heaters and electric fan converters should be input by defining an HVAC system in the *Building Services* form > *HVAC Systems* tab > *General* sub-tab and selecting the system type “Other local room heater - fanned”. If you do not know the heating method (i.e., whether a heated-only building uses electricity or a fuel-based heating system), you should select electric resistance heating as your default.
- ‘Heating only - Other systems’ - Assumed to be a wet radiator system with heat generated by fuel combustion. Pumps assumed to be powered by grid-supplied electricity. If you know the fuel type used by the heating system, you can define it in the *Building Services* form > *Global and Defaults* tab > *HVAC System Defaults* sub-tab (see Section 3.5.1: Global and Defaults tab).
- ‘Heating and mechanical cooling’ - Assumed to be a constant volume air system with terminal reheat and fixed fresh air. Refrigeration (chillers), fans, and pumps assumed to be powered by grid-supplied electricity. If you know the fuel type used by the heating system, you can define it in the *Building Services* form > *Global and Defaults* tab > *HVAC System Defaults* sub-tab (see Section 3.5.1: Global and Defaults tab).

**NB:** The default HVAC systems in iSBEM are representative of existing rather than new buildings and should only be used if you are running an EPC calculation for an existing building (not a new building) and do not know the type of the HVAC system in your building or its detailed parameters as the default efficiencies assumed by iSBEM for them are quite pessimistic and cannot be edited by the user.

Figure 18 shows a zone's HVAC, HWS, and lighting characteristics being defined.

The screenshot shows the iSBEM software interface with the 'Zones' tab selected. The 'Record selector' is set to 'z0/01 east'. The 'HVAC & HW systems' sub-tab is active, showing three main sections: 'HVAC system parameters', 'Lighting system', and 'Hot Water System'. In the 'HVAC system parameters' section, 'System selection' is set to 'HVAC for the example building' and there is a checkbox for 'Are there Destratification fans in the zone?'. In the 'Lighting system' section, 'System selection' is set to 'Lighting configured at zone level'. In the 'Hot Water System' section, 'HWS selection' is set to 'HWS for the example building' and 'Deadleg length in this zone' is set to '2 m'. The bottom of the interface shows a record list with '1 of 19' records and a search bar.

**Figure 18: Selecting a zone's HVAC, HWS, and lighting systems**

### Ventilation sub-tab:

Guidance on input parameters in this sub-tab not described below is the same as that provided in the User Guide volume **"How to use iSBEM: Compliance Assessment - UK"**.

This sub-tab is used to specify the type of ventilation system specific for each zone. The following information is required:

#### *Zonal Ventilation Type*

1. Zonal ventilation type – A mechanical ventilation system separate from the heating or cooling system (i.e., zonal ventilation) can be added here. If the selected HVAC system does not already include ventilation, the zonal ventilation radio buttons become active. This would be possible, for example, with radiators or under-floor heating. You need to select either: Natural or Mechanical supply & extract, according to whether there is a mechanical ventilation system present in the zone to provide fresh air.

**Convention:** For EPCs - Passive stack ventilation

The convention is that passive stack should be treated as natural ventilation.

Figure 19 shows a zone's ventilation characteristics being defined.



Figure 19: Defining the zone ventilation in the Ventilation sub-tab

#### Ventilation (cont) sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### Exhaust sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### Lighting sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### Lighting Controls sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

#### Display Lighting sub-tab:

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.



#### **Solar Collector sub-tab:**

Guidance on input in this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.6. Building Navigation form**

Guidance on this form is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

### **3.7. About iSBEM form**

Guidance on this form is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

DRAFT

## 4. CALCULATING AND VIEWING THE ENERGY PERFORMANCE OF THE BUILDING - THE RATINGS FORM AND OUTPUT REPORTS

The energy performance of the building is calculated and the Energy Performance Certificate is generated via the *Ratings* form. The key results are then displayed in this form while further details on the asset rating and a more detailed analysis of the energy used and CO<sub>2</sub> emitted from the building are given in the SBEM output reports. This chapter describes how to calculate the results and access the various outputs.

### 4.1. The Ratings form

The *Ratings* form allows the user to run the entered building model through SBEM and the Energy Performance Certificate Generator Module (EPCgen) to calculate the energy consumption of the building, CO<sub>2</sub> emissions (and those of the notional, reference, and typical buildings), and its Asset Rating. You can do this by pressing the “Calculate EPC rating” button in the *Asset Rating* tab > *Building Rating* sub-tab.

**NB:** You will be able to monitor on the screen the progress of the calculation process as it is carried out for the different building objects.

1. View the key results within the interface.
2. Access the following output reports: the *Energy Performance Certificate*, the *Recommendations Report*, the *SBEM Main Output* report, *SBEM Secondary Recommendations Report* and the *Data Reflection Report* for the actual building.

The *Ratings* form is composed of one tab, which is:

- **Asset Rating** tab: displays the CO<sub>2</sub> emissions, in kg per m<sup>2</sup> of building area, for the actual and typical buildings, Part L TER, and SER, along with their corresponding EPC bands. It also displays a break-down of the annual energy consumption by end-use for the actual, notional, and reference buildings in kWh/m<sup>2</sup>.

#### 4.1.1. Asset Rating tab

The *Asset Rating* tab has the following sub-tabs:

- **Building Rating** sub-tab
- **Graphic Rating** sub-tab
- **Recommendations** sub-tab
- **EPC Audit** sub-tab
- **Calculation Logs** sub-tab
- **Calculation Errors** sub-tab
- **Supporting Documents** sub-tab

### Building Rating sub-tab:

The *Asset Rating* is calculated by clicking on the “Calculate EPC Rating” button. This runs the data through the SBEM calculation engine and the Energy Performance Certificate Generator (EPCgen).

**NB:** Please note that in order to generate the XML message for official lodgement in England, Wales, and Northern Ireland, your computer **must** be connected to the internet, and you need to enter all your assessor details into the *General* form > *General Information* tab > *Energy Assessor Details* sub-tab > *Energy Assessor Details* sub-form (see Section 3.2.2: General Information tab). If there is no internet connection, then the XML message will not be generated. Please note that the EPC and Recommendations Report produced on your computer will always contain the watermark. However, this does not apply if ‘EPC Scotland’ has been selected as the “Purpose of Analysis”, when the XML is always generated if the calculation runs successfully, and the EPC documents generated on your computer are not watermarked.

**NB:** See APPENDIX C: Connection to the National Register, for more guidance.

The *Building Rating* sub-tab then displays the following calculated results:

1. The energy used per unit floor area (kWh/m<sup>2</sup>) annually by the actual, notional, and reference buildings for heating, cooling, auxiliary energy, lighting, and hot water.
2. The total energy used per unit floor area (kWh/m<sup>2</sup>) annually by the actual, notional, and reference buildings in terms of electricity and fuel use. **NB:** If applicable, this total value includes any energy consumed by a CCHP generator to provide space heating, space cooling, and/or water heating, and it is net of any electrical energy displaced by the CCHP generator.
3. The resulting annual CO<sub>2</sub> emissions (kgCO<sub>2</sub>/m<sup>2</sup>) from the actual building (BER), the target (Part L TER), the typical building (Stock average TYP), and the standard emission rate (SER). For details on the definition of the reference and typical buildings, SER, and Part L target, see Section 2.1: UK Energy Performance Certificate purposes and the 2013 NCM Modelling Guide.
4. The EPC bands corresponding to the annual CO<sub>2</sub> emissions from the actual building, the SER, the target (Part L TER), and the typical building (Stock average TYP).
5. The *EPC Rating (Asset Rating)* of the actual building.

Also accessible from this sub-tab is the *Energy Performance Certificate*, the *Recommendations Report*, the *SBEM Main Output* report, the *Data Reflection* Report for the actual building and supporting recommendations in the form of a secondary not-for-official-submission report (only available for the generation of EPCs for England, Wales and Northern Ireland). See Sections: 4.2.1: SBEM Main Output Document, 4.2.2: Data Reflection Report – Actual Building, 4.2.6: Energy Performance Certificate, 4.2.7: Recommendations Report, and 4.2.9: SBEM Secondary Recommendations Report.

**NB:** The Data Reflection Reports in html format are generated, and the related access buttons become visible in the *Ratings* form, only if the relevant box has been ticked in the *General* form > *File Options* tab > *System Configuration* sub-tab.

**NB:** If any changes are made to a project (i.e., input parameters), the “Calculate EPC Rating” button needs to be clicked on again upon returning to this tab in order to update the results as the results figures cannot be refreshed unless the calculation is re-run.

**NB:** You must close all output files before re-running the calculation (so the software can overwrite them). Otherwise, an error message will be produced.

Figure 20 shows the *Building Rating* sub-tab in the *Asset Rating* tab of the *Ratings* form for EPC England (Wales and Northern Ireland are similar) and Figure 21 shows the same for Scotland.

The message at the bottom of the screen indicates that there are no critical un-assignments detected in the project. If there were, the user would need to click on the “Objects Report” button, identify the un-assignment, make the correction in the appropriate part of iSBEM, return to this page, and then click the “Calculate EPC Rating” button.

**General** **Project Database** **Geometry** **Building Services** **Ratings** **Building Navigation** **About iSBEM**

Asset Rating

**EPC England**

Building Rating | Graphic rating | Recommendations | EPC Audit | Calculation Logs | Calculation Errors | Supporting Documents

	Heating	Cooling	Auxiliary	Lighting	Hot Water	Total	
Actual	0.96	20.35	19.94	30.72	23.81	95.78	kWh/m2/yr
Notional	1.99	14.22	19.29	37.37	23.92	96.79	kWh/m2/yr
Reference	48.74	38.17	2.52	81.25	45.95	216.63	kWh/m2/yr

	Part L TER	Typical	SER	BER	EPC Rating
kgCO2/m2/yr	42	123.2	64.1	41.6	
Band	B	D	B-C	B	32

**Calculate EPC Rating**

Energy Performance Certificate

EPC recommendations report

Supporting Recommendations

Click on text below for...

SBEM Outputs

Data Reflection - Actual Building

**Calculation progress: Asset rating completed**

Click to check object assignments, there are NO CRITICAL un-assignments in the project

**Figure 20: Using the interface to calculate the Asset Rating for the building in the Asset Rating tab of the Ratings form for England**

General | Project Database | Geometry | Building Services | Ratings | Building Navigation | About iSBEM

**ACTUAL SCOTLAND EPC**

Asset Rating

**EPC Scotland** ?

Building Rating | Recommendations | EPC Audit | Calculation Logs | Calculation Errors | Supporting Documents

	Heating	Cooling	Auxiliary	Lighting	Hot Water	Total	
Actual	1.6	18.19	19.97	31.31	23.86	94.93	kWh/m <sup>2</sup> /yr
Notional	57.97	48.68	34.13	81.33	45.95	268.06	kWh/m <sup>2</sup> /yr

	S6 TER	Actual	Comparable in EW
kgCO <sub>2</sub> /m <sup>2</sup> /yr	53.1	40.5	
EPC Rating	53	41	32
Band	D	C	B

**Calculate EPC Rating** Click on text below for...

Energy Performance Certificate SBEM Outputs

EPC recommendations report Data Reflection - Actual Building

**Calculation progress: Asset rating completed**

Click to check object assignments, there are NO CRITICAL un-assignments in the project

**Figure 21: Using the interface to calculate the Asset Rating for the building in the Asset Rating tab of the Ratings form for Scotland**

### Graphic Rating sub-tab:

The *Graphic Rating* sub-tab (Figure 22) is only visible for the generation of EPCs for England, Wales, and Northern Ireland. It displays the following:

1. A graph of the EPC rating band scale showing the energy bands and asset ratings corresponding to the annual CO<sub>2</sub> emissions from the actual building, the target (Part L TER), the typical building (Stock average TYP), and the reference and zero CO<sub>2</sub> emissions benchmarks. The same graph is also displayed on the Energy Performance Certificate.

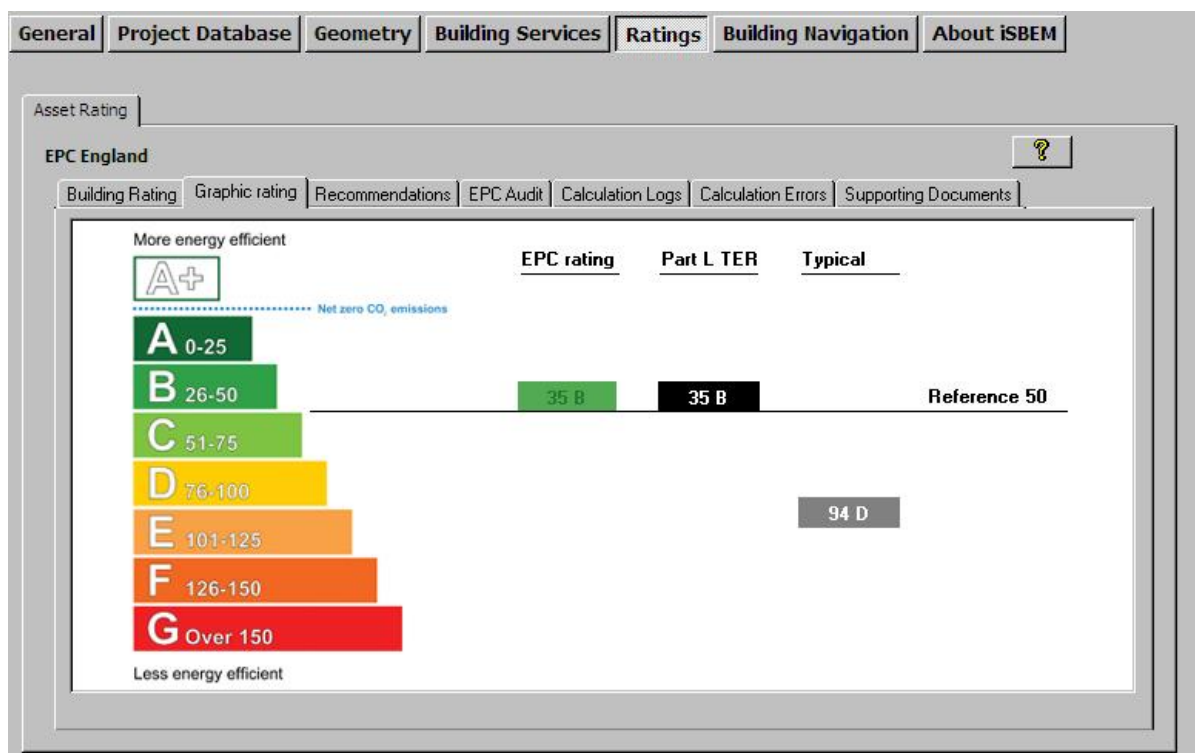


Figure 22: The Graphic Rating sub-tab in the Asset Rating tab of the Ratings form

### Recommendations sub-tab:

Once the *Asset Rating* has been calculated successfully, the EPCgen module produces the *EPC* and the *Recommendations* Report. The latter contains the NCM and user-defined recommendations for energy efficiency improvements to the actual building. This sub-tab (Figure 23) contains the following parameters:

1. There are 4 radio buttons in a box entitled "Show recommendations":
  - a. All NCM – Click this button to view only the NCM recommendations generated by EPCgen.
  - b. All USER – click this button to view only the recommendations added by the user. If there are no user-defined recommendations, then iSBEM will prompt you to add one (see below).
  - c. All – Click this button to view both the NCM recommendations and the ones added by the user.
  - d. Only from Report – Click this button to view only the recommendations that have been included in the *Recommendations* report.


In addition to creating new recommendations in this sub-tab, the energy assessor can also edit the NCM recommendations generated by EPCgen by adding comments and/or modifying the calculated impacts, using the following parameters:

2. Click to edit this recommendation – By ticking this tick-box, you indicate that you wish to edit this particular NCM recommendation (whose text can be viewed in the grey box entitled "Recommendation") generated by EPCgen. If the box is ticked, the following fields become active:
  - a. Assessor Comments - You can enter any comments related to the recommendation, for e.g., the reason why you have chosen to edit this NCM recommendation. These comments will appear in SBEM's *Secondary Recommendations* report, not the official *Recommendations* report.

- b. Energy Impact - You can select from the options available in the drop-down menu in order to specify the potential impact of implementing the recommendation on the energy performance of the actual building. (HIGH = change in total building energy is >4%, MEDIUM = change in total building energy is ≤4% and >0.5%, LOW = change in total building energy is <0.5%).
- c. CO<sub>2</sub> Impact - You can select from the options available in the drop-down menu in order to specify the potential impact of implementing the recommendation on the CO<sub>2</sub> emissions of the actual building. (HIGH = change in total building CO<sub>2</sub> emissions is >4%, MEDIUM = change in total building CO<sub>2</sub> emissions is ≤4% and >0.5%, LOW = change in total building CO<sub>2</sub> emissions is <0.5%). This impact will appear in the *Recommendations* report.
- d. CO<sub>2</sub> Saved per £ Spent - You can select from the options available in the drop-down menu (GOOD, FAIR, POOR, and UNKNOWN) in order to specify the potential CO<sub>2</sub> emissions saved from the actual building per pound spent on implementing the recommendation in the actual building.
- e. Payback (drop-down menu) - You can select from the options available in the drop-down menu (LONG, MEDIUM, and SHORT) in order to specify the typical payback time for implementing the recommendation in the actual building. (LONG = payback is >7 years, MEDIUM = payback is ≥3 years and <7 years, SHORT = payback is <3 years). If you know the exact figure for payback time in years, use the next parameter instead.
- f. Payback (number) – Here you can input, in years, the typical payback time for implementing the recommendation in the actual building. If you do not know the exact figure for payback time in years, use the previous parameter instead.

The following fields, however, remain greyed-out or un-editable as the user is not allowed to modify these parameters of NCM recommendations:

- a. Category – This describes the category under which the recommendation is classified, such as heating, cooling, etc.
  - b. Code – This describes a unique code for each NCM recommendation. The code of any recommendation created by the energy assessor will be USER.
  - c. Recommendation – This describes the text of the NCM recommendation. This text will appear in the *Recommendations* report.
  - d. Applicable to – This describes the object to which the recommendation applies, for e.g., the whole building or a particular HVAC system or HWS.
3. Click to take out – By ticking this tick-box, you indicate that you wish to remove this particular NCM recommendation, which was generated by EPCgen, from the *Recommendations* Report.

If the “All USER” radio button is selected in the “Show recommendations” box or the “Add new record” button  at the bottom of the screen is clicked, then iSBEM will prompt you to create a new recommendation.

- 4. Once you have confirmed that you do wish to add a recommendation to the ones already generated by EPCgen, then the following fields become active (Figure 24):
  - a. Category - You can select from the options available in the drop-down menu in order to specify the category under which the recommendation will be classified.
  - b. Code – This parameter remains set to ‘USER’ for any user-defined recommendation.
  - c. Recommendation – You can enter text to describe the newly-added recommendation. This text will appear in the *Recommendations* report.
  - d. Assessor Comments - You can enter any comments related to the recommendation, for e.g., the reason why you have chosen to add this NCM recommendation. These

comments will appear in SBEM's *Secondary Recommendations* report, not the official *Recommendations* report.

- e. Energy Impact - You can select from the options available in the drop-down menu in order to specify the potential impact of implementing the recommendation on the energy performance of the actual building. (HIGH = change in total building energy is >4%, MEDIUM = change in total building energy is ≤4% and >0.5%, LOW = change in total building energy is <0.5%). **NB:** If you enter the value as UNKNOWN, SBEM will set it to LOW.
- f. CO<sub>2</sub> Impact - You can select from the options available in the drop-down menu in order to specify the potential impact of implementing the recommendation on the CO<sub>2</sub> emissions of the actual building. (HIGH = change in total building CO<sub>2</sub> emissions is >4%, MEDIUM = change in total building CO<sub>2</sub> emissions is ≤4% and >0.5%, LOW = change in total building CO<sub>2</sub> emissions is <0.5%). This impact will appear in the *Recommendations* report. **NB:** If you enter the value as UNKNOWN, SBEM will set it to LOW.
- g. CO<sub>2</sub> Saved per £ Spent - You can select from the options available in the drop-down menu (GOOD, FAIR, POOR, and UNKNOWN) in order to specify the potential CO<sub>2</sub> emissions saved from the actual building per pound spent on implementing the recommendation in the actual building. **NB:** If you enter the value as UNKNOWN, SBEM will set it to POOR.
- h. Payback (drop-down menu) - You can select from the options available in the drop-down menu (LONG, MEDIUM, and SHORT) in order to specify the typical payback time for implementing the recommendation in the actual building. (LONG = payback is >7 years, MEDIUM = payback is ≥3 years and <7 years, SHORT = payback is <3 years). **NB:** If you enter the value as UNKNOWN, SBEM will set it to LONG. If you know the exact figure for payback time in years, use the next parameter instead.
- i. Payback (number) – Here you can input, in years, the typical payback time for implementing the recommendation in the actual building. If you do not know the exact figure for payback time in years, use the previous parameter instead.
- j. Applicable to – Here you can specify the object to which the recommendation applies, for e.g., the whole building or a particular HVAC system or HWS. If the option selected is either 'HVAC-SYSTEM' or 'HWS', then the following parameter becomes active:
  - i. Name – You need to specify the name of the particular HVAC system or HWS (already defined in iSBEM) to which the user-defined recommendation refers.

**NB: Only recommendations that are defined as applicable to the whole building, i.e., the parameter “Applicable to” has been set to ‘BUILDING’, appear in the official Recommendations report. All the defined recommendations, however, will appear in SBEM’s Secondary Recommendations report.**

- 5. Delete Recommendation – This button allows you to delete a user-defined recommendation.



**Figure 23: The Recommendations sub-tab in the Asset Rating tab of the Ratings form showing an NCM recommendation**

**NB:** After editing, deleting, or adding any recommendations, you need to re-run the calculation in order to re-generate the Recommendations Report with all your editing applied.

**NB:** The NCM recommendations are generated for the building and its energy systems when operated according to standard schedules appropriate to the general activities in the building. The Energy Assessor is expected to use his or her knowledge to remove inappropriate ones and possibly to add further ones. If the Energy Performance Rating calculation has made extensive use of default values, some of the recommendations may be based on uncertain assumptions. These recommendations do not cover the quality of operation or maintenance of the building and its systems. There are frequently significant opportunities for energy and carbon savings in these areas and a full "energy audit" to identify them is strongly recommended.

**NB:** Once a recommendation has been edited by the user, it can no longer be displayed in the *Recommendations* report as being automatically generated by the calculation, and so cannot appear in any of the first 3 tables. It must appear in the fourth table containing the users' added or edited recommendations. This is the case if the 'tick to edit' box is ticked for any particular recommendation (even if no changes are actually made or comments are added by the user after ticking the box).

**Figure 24: The Recommendations sub-tab in the Asset Rating tab of the Ratings form showing the active fields for creating a user-defined recommendation**

**NB: Guidance on editing recommendations:** When editing recommendations for a particular project, you are advised to first run the calculation before editing or removing any recommendations in the *Recommendations* sub-tab. Once the calculation has run successfully, you can view the official Recommendations Report and identify if there are any recommendations which you feel are not valid for your specific project and you want removed, or new ones you want added based on your knowledge of the project. Then, you can go to the *Recommendations* sub-tab and click on the radio button “Only from report” in order to display only the recommendations that have been triggered by the calculation for this project, rather than all the possible recommendations. Out of these recommendations, you can then tick to remove any ones that are applicable to the whole building, so that they no longer appear on the report. You can also add any new ones making sure you set them as “applicable to the whole building” if you want them to appear on the official report. Once you are done editing, you can re-run the calculation, and save your updated nct file.

#### **EPC Audit sub-tab:**

The *EPC Audit* sub-tab (Figure 25) contains four sub-forms as follows:

- **Construction** sub-form – contains the audit trail information relating to the construction input parameters, i.e., construction specification of walls, floors, roofs, windows, rooflights, and doors.
- **Geometry** sub-form - contains the audit trail information relating to the geometry input parameters, i.e., definitions of thermal bridges; air permeability; and shading systems on glazing.
- **HVAC & HWS** sub-form - contains the audit trail information relating to the HVAC and HWS input parameters, i.e., heating and cooling system type; heating and cooling efficiencies, duct and AHU leakage, specific fan power, HWS generator efficiency, metering and controls provision, and high pressure drop air filtration.

- **Lighting** sub-form - contains the audit trail information relating to the lighting input parameters, i.e., lamp type, lighting controls, and parasitic power.

This sub-tab is where the energy assessor provides supporting evidence for over-riding any of the default values in iSBEM. This information is necessary for the audit trail regarding all the parameters that are used to carry out the energy calculations for the generation of the EPC, should any of the default values or settings be changed by the energy assessor. Each of the above four sub-sub-tabs contains the following:


1. Accept defaults – this is the list of defaults set in iSBEM for each of: Construction, Geometry, HVAC & HWS, and Lighting, which the energy assessor can over-ride.
2. Assessor walk-through inspection – supporting evidence based on a walk-through inspection by the energy assessor.
3. Inspection by other: Sales particulars - supporting evidence based on sales particulars.
4. Inspection by other: Technical inspection - supporting evidence based on a technical inspection by someone other than the energy assessor.
5. On-site measurements of input parameters for assessment - supporting evidence based on on-site measurements of the input parameters.
6. Other sources - supporting evidence based on other sources.
7. Comments – additional information that the energy assessor would like to include for the audit trail.

Please introduce concise supporting evidence for over-writing default values	
Accept default	Internal wall, roof, floor parameters based on age, generic type; thermal bridging based on use of accredited details
Assessor walk-through inspection	Type of internal wall, roof, floor
Inspection by others	<div> <div>Sales particulars</div> <div>Technical inspection</div> </div>
On-site measurements of input parameters for assessment	Construction/regulations date from building control approval documentation
Design or as-built documentation	External wall, door, glazing parameters derived from first principles from drawings and manufacturers info; accredited details confirmed
Other sources	
Comments	

**Figure 25: The EPC Audit sub-tab in the Asset Rating tab of the Ratings form**

### Calculation Logs sub-tab:

Log files for the SBEM calculation (SBEM.log) and the EPC generator, EPCgen, (EPCgen.log) can be viewed in this sub-tab (Figure 26).

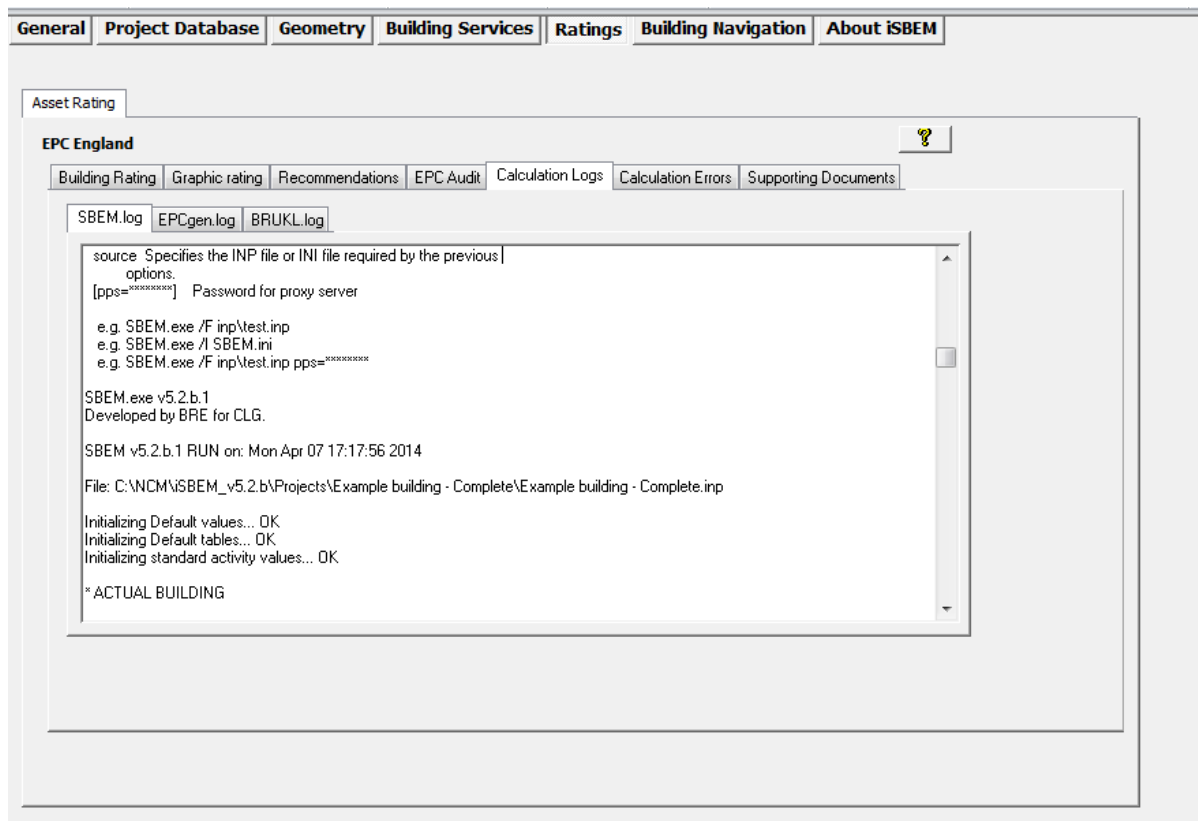

**Figure 26: The Calculation Logs sub-tab in the Asset Rating tab of the Ratings form**

#### **Calculation Errors sub-tab:**

Error files for the SBEM calculation (SBEM.err) and the EPC generator, EPCgen, (EPCgen.err) can be viewed in this sub-tab (Figure 27). If the calculation crashes, you can refer to these files for any error messages produced during the calculation.

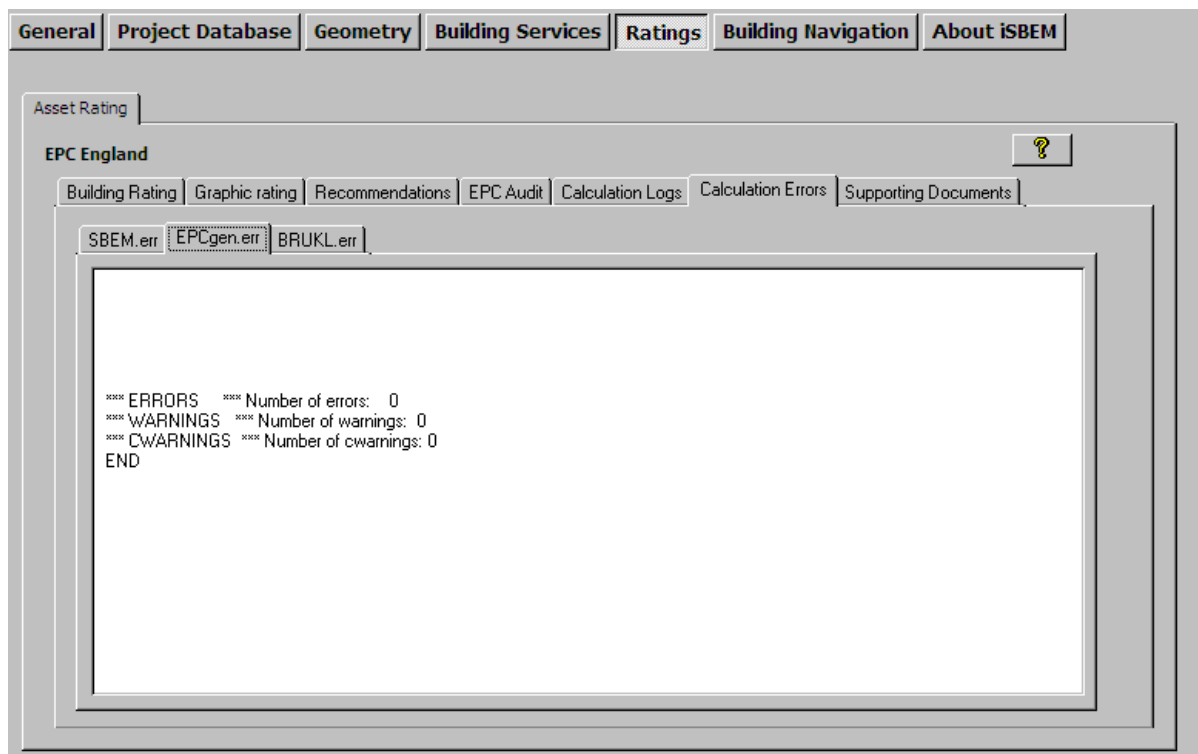


Figure 27: The Calculation Errors sub-tab in the Asset Rating tab of the Ratings form

#### Supporting Documents sub-tab:

Guidance on this sub-tab is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**.

## 4.2. SBEM Output reports

### Output reports when running SBEM for Energy Performance Certificates:

If the calculation were run to generate the Energy Performance Certificate, then SBEM produces **eight** output reports. The nine reports produced by SBEM are as follows.

1. SBEM Main Output Document
2. Energy Performance Certificate
3. Recommendations Report
4. Data Reflection Report – for the Actual Building
5. Technical Output Report – for the Actual Building
6. Technical Output Report – for the Notional Building
7. Technical Output Report – for the Reference Building

The following additional report is also produced but only during the generation of the Energy Performance Certificate for England, Wales, and Northern Ireland.

8. SBEM Secondary Recommendations Report

As described previously, the first four reports are accessible from within iSBEM, using the appropriate buttons or hyperlinks in the *Ratings* form > *Asset Rating* tab > *Building Rating* sub-tab. These reports are all stored in the same location as the project files, along with the *Technical Output* Reports, which can only be accessed from the “Projects” folder. The default

location for the project files is within the specific project folder (created when the project was first created, see in the User Guide volume '**How to use iSBEM: Basics - UK**') within the iSBEM\_v5.2.d folder, e.g., C:\NCM\iSBEM\_v5.2.d\ Projects\Example building-complete.

One more file is produced when running the asset rating calculation and generating an EPC. This file is the XML message required for the official submission/lodgement of the EPC with the National Register. It contains all the data used in the generation of the Energy Performance Certificate and the EPC Recommendations report. Please note that in order to generate the XML message for official lodgement in England, Wales, and Northern Ireland, your computer **must** be connected to the internet, and you need to have entered your assessor number into the General form > General Information tab > Energy Assessor Details sub-tab > Energy Assessor Details sub-form (see Section 3.2.2: General Information tab). Please note that the EPC and Recommendations Report produced on your computer will always contain the watermark. However, this does not apply if 'EPC Scotland' has been selected as the "Purpose of Analysis", when the XML is always generated if the calculation runs successfully, and the EPC documents generated on your computer are not watermarked.

**NB:** See APPENDIX C: Connection to the National Register, for more guidance.

#### **4.2.1. SBEM Main Output Document**

Guidance on this document is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**".

#### **4.2.2. Data Reflection Report – Actual Building**

Guidance on this document is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**".

#### **4.2.3. Data Reflection Report – Notional Building**

Guidance on this document is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**".

#### **4.2.4. Technical Output Report – Actual Building**

Guidance on this document is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**".

#### **4.2.5. Technical Output Report – Notional Building**

Guidance on this document is the same as that provided in the User Guide volume **How to use iSBEM: Compliance Assessment - UK**".

#### **4.2.6. Energy Performance Certificate**

This report can be accessed from the *Ratings* form > *Asset Rating* tab > *Building Rating* sub-tab by clicking on the "Energy Performance Certificate" button and is stored in the same location as

the project files as described in Section 4.2.10: Accessing the reports from the project folder. The file is in “pdf” format.

This report gives a summary of the energy performance of the building and its Asset Rating. It contains the following sections:

- **Energy Performance Certificate:** contains the title of the certificate, address of the building, and the Certificate Reference Number.
- **Energy Performance Asset Rating:** contains information about the building’s calculated Asset Rating based on its predicted CO<sub>2</sub> emission rate (BER). It also shows where the building’s Asset Rating fits on a scale of the building energy efficiency bands.
- **Benchmarks:** contains information about the Asset Ratings corresponding to the target CO<sub>2</sub> emission rate (Part L TER) and the typical (stock average) CO<sub>2</sub> emission rate.
- **Technical Information:** contains information on the servicing strategy of the building (i.e., building environment – the service strategy that delivers the greatest total CQ emissions), the main heating fuel (the fuel which delivers the greatest total thermal output for space or water heating), and the complexity of the building.

**NB:** If none of the zones in the building have been defined as conditioned, the “building environment” will be set by the calculation to be “Unconditioned”.

**NB:** If none of the zones in the building as defined have space or water heating energy consumption, the “main heating fuel” will be set by the calculation to be “Other”.

**NB:** Permanently unconditioned buildings are different to those which are expected to be conditioned later on, and which should be modelled as per the guidance in DCLG’s publication: “Improving the energy efficiency of our buildings: A guide to energy performance certificates for the construction, sale and let of non-dwellings” which can be accessed from <https://www.gov.uk/government/publications/energy-performance-certificates-for-the-construction-sale-and-let-of-non-dwellings-2>

**NB:** For Scotland, the EPC (which has a different format from that in England, Wales, and Northern Ireland, and implements a different methodology for the calculation of the Asset Rating) also displays the top 6 of the short payback NCM recommendations. If there are user-defined or user-edited recommendations, then the EPC will display up to 3 user recommendations with the shortest payback and the top 3 of the short payback NCM recommendations.

**NB:** If the Energy Assessor wants the potential asset rating to be populated on the Scotland EPC and its XML file, a scenario for the potential building with the recommended improvements needs to be created and run successfully as described in Section 3.2.3: Obtaining Potential Asset Rating for EPC Scotland.

- **Administrative Information:** contains the energy assessor’s details, Property Reference Number, assessment software, the certificate’s validity dates, and the Recommendations Report Reference Number (the second output file from EPCgen).

See APPENDIX A: A.1 for a sample *Energy Performance Certificate* for the Example building.

**NB:** You must close all output files before re-running the calculation (so the software can overwrite them). Otherwise, an error message will be produced.

## 4.2.7. Recommendations Report

This report can be accessed from the *Ratings* form > *Asset Rating* tab > *Building Rating* sub-tab by clicking on the “EPC Recommendation Report” button and is stored in the same location as the project files, as described in Section 4.2.10: Accessing the reports from the project folder. The file is in “pdf” format.



This report contains some administrative information about the building and the energy assessor and a list of recommendations (generated by the calculation and input by the energy assessor) for energy-efficiency improvements in the building. It contains the following sections:

- Administrative Information: contains information on the Property Reference Number, the software used to produce the report, and the validity dates of the report.
- Energy Assessors Details: contains details about the energy assessor.
- Background: contains information on the legislation and the servicing strategy of the property.
- Introduction: contains information on the calculation tool used.
- Recommendations: contains a list of recommendations, edited by the energy assessor, for the improvement of the energy performance of the building and their respective potential impact on the CO<sub>2</sub> emission rate of the building. The recommendations are grouped into the following sub-sections: short payback (up to 15 recommendations), medium payback (up to 10 recommendations), long payback (up to 5 recommendations), and other recommendations created by the energy assessor (up to 10 recommendations).

**NB: Only recommendations that are defined as applicable to the whole building, i.e., the parameter “Applicable to” has been set to ‘BUILDING’, appear in the official Recommendations report. All the defined recommendations, however, will appear in SBEM’s Secondary Recommendations report.**

- Next Steps: contains information on the steps that need to be taken following the production of the reports.
- Glossary: contains definitions of some of the terms used in the report.

See APPENDIX A: A.2 for a sample *Recommendations Report* for the Example building.

**NB:** You must close all output files before re-running the calculation (so the software can overwrite them). Otherwise, an error message will be produced.

**NB:** The NCM recommendations are generated for the building and its energy systems when operated according to standard schedules appropriate to the general activities in the building. The Energy Assessor is expected to use his or her knowledge to remove inappropriate ones and possibly to add further ones. If the Energy Performance Rating calculation has made extensive use of default values, some of the recommendations may be based on uncertain assumptions. These recommendations do not cover the quality of operation or maintenance of the building and its systems. There are frequently significant opportunities for energy and carbon savings in these areas and a full "energy audit" to identify them is strongly recommended.

#### 4.2.8. Technical Output Report – Reference Building

This is a comma-separated-values ‘.csv’ file (which can be opened using Microsoft Excel) for the reference building similar in format to the technical output report for the actual building described previously (see Section 4.2.4: Technical Output Report – Actual Building).

#### 4.2.9. SBEM Secondary Recommendations Report

This report is generated if either ‘EPC England’, ‘EPC Wales’, or ‘EPC Northern Ireland’ were selected as the “Purpose of Analysis” in the *General* form > *General Information* tab > *Project Details* sub-tab, and the calculation was run to generate the Energy Performance Certificate. It can be accessed from the *Ratings* form > *Asset Rating* tab > *Building Rating* sub-tab by clicking on the “Supporting Recommendations” button and is stored in the same location as the project



files as described in Section 4.2.10: Accessing the reports from the project folder. The file is in “pdf” format.

This report gives a summary of building’s energy and CO<sub>2</sub> emissions performance for the different end-use categories and a full list of recommendations (generated by the calculation and/or input by the user) for energy-efficiency improvements in the building (i.e., not just the recommendations that appear in the official *Recommendations* report described in section 4.2.7: Recommendations Report. It provides:

- The name and type of the building.
- A key to the colour codes used in displaying the recommendations.
- The current performance of the building for each of the following categories, such as the attributed percentage of the total building’s CO<sub>2</sub> emissions and overall energy performance:
  - Heating
  - Cooling
  - Hot water
  - Lighting
  - Renewables
  - Overheating
  - Envelope
  - Fuel-Switching
  - Auxiliary
  - Other
- Recommendations related to each of the above categories, and for each recommendation, a set of information is displayed, such as the potential impact of implementing the recommendation on the energy performance and CO<sub>2</sub> emissions of the building, the potential saving in CO<sub>2</sub> emissions per pound spent, and any additional comments input by the energy assessor. It also includes any comments added by the Energy Assessor to any of the NCM recommendations.

**NB:** Any NCM recommendations removed by the Energy Assessor from the official *Recommendations Report* will still appear in the *SBEM Secondary Recommendations Report*.

See APPENDIX A: A.3 for a sample *SBEM Secondary Recommendations Report* for the Example building.

#### 4.2.10. Accessing the reports from the project folder

All of the above reports are accessible from the specific project folder (created when the project was first created, in the User Guide volume **‘How to use iSBEM: Basics - UK’**). The default location for this folder is within the main **Projects** folder within the **iSBEM\_v5.2.d** folder, e.g., “C:\NCM\iSBEM\_v5.2.d\Projects\Example building-complete”. The reports have the following file names and extensions:

##### **Output reports when running SBEM for Energy Performance Certificates:**

1. SBEM Main Output Document – “project name”\_sbem. pdf
2. Energy Performance Certificate – “project name”\_epc[epc].pdf
3. EPC Recommendations Report – “project name”\_epc[rec].pdf
4. Data Reflection Report - Actual Building – “project name”\_dr.htm
5. Data Reflection Report - Actual Building – “project name”\_dr.pdf
6. Technical Output Report - Actual Building – “project name”\_sim.csv
7. Technical Output Report - Notional Building – “project name”\_not\_sim.csv
8. Technical Output Report - Reference Building – “project name”\_ref\_sim.csv

9. SBEM Secondary Recommendations Report.– “project name”\_epc[srec].pdf

**XML file when running SBEM for official submission of Energy Performance Certificates**  
will be named as follows:

1. XML file for the Energy Performance Certificate and the EPC Recommendations Report  
– “EPC reference number”. **.xml**

If the EPC is generated in Welsh as well as in English (by ticking the relevant tick box in the *General* form > *General Information* tab > *Project Details* sub-tab), the file containing the EPC in Welsh will be named as follows:


1. Energy Performance Certificate in Welsh – “project name”\_epcw.pdf

The project folder for the “Example building – Complete” file is shown in Figure 28 with the output reports highlighted when running SBEM for Energy Performance Certificates.

Also highlighted is **the NCT file which is the file that is read by iSBEM and where all the input data has been stored**. If you need to share a project with your colleagues, this is the only file you need to send them. They will be able to open it through iSBEM and generate all the other files.

Other files highlighted in Figure 28, 4 error files (with the extension **.err**) are highlighted which contain warnings or error messages generated by SBEM or EPCgen during the calculation. These are text files which can be opened by any text editor on your computer, for e.g., MS Notepad. The contents of these files can also be viewed in the *Calculation Errors* sub-tab in the *Ratings* form (see section 4.1.1: Asset Rating tab).

**NB:** You must close all output files before re-running the calculation (so the software can overwrite them). Otherwise, an error message will be produced.

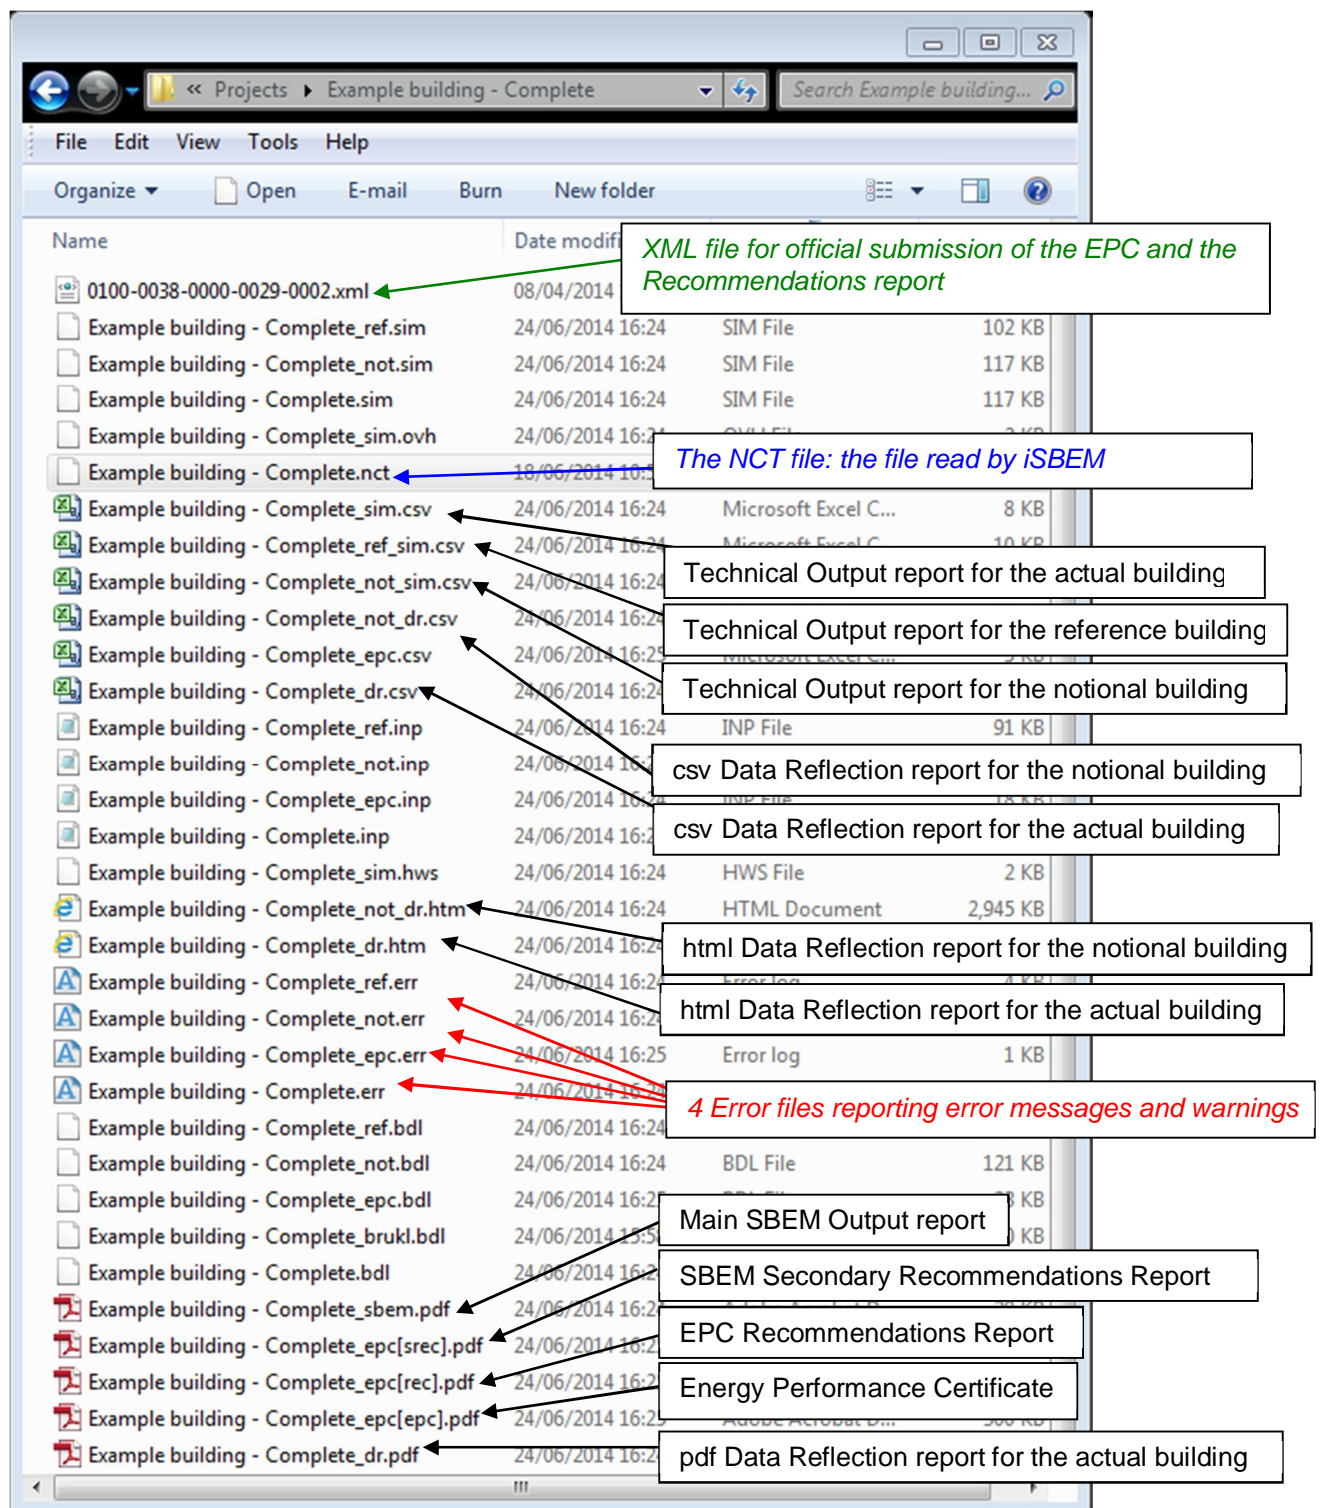

**Figure 28: Contents of the Projects folder showing the SBEM output reports when running SBEM for Energy Performance Certificates**

## APPENDIX A: Sample Output Reports

### A.1. Sample Energy Performance Certificate

Energy Performance Certificate		HM Government	
Non-Domestic Building			
56 London Road LONDON SW23 1HA		Certificate Reference Number: 0100-0038-0000-0029-0002	
<p>This certificate shows the energy rating of this building. It indicates the energy efficiency of the building fabric and the heating, ventilation, cooling and lighting systems. The rating is compared to two benchmarks for this type of building: one appropriate for new buildings and one appropriate for existing buildings. There is more advice on how to interpret this information on the Government's website <a href="http://www.communities.gov.uk/epbd">www.communities.gov.uk/epbd</a>.</p>			
Energy Performance Asset Rating			
More energy efficient			
<div><div>A+</div><div>A 0-25</div><div>B 26-50</div><div>C 51-75</div><div>D 76-100</div><div>E 101-125</div><div>F 126-150</div><div>G Over 150</div></div>			
Net zero CO <sub>2</sub> emissions			
		<div><div>32</div></div>	This is how energy efficient the building is.
Less energy efficient			
Technical information		Benchmarks	
Main heating fuel: Natural Gas		Buildings similar to this one could have ratings as follows:	
Building environment: Air Conditioning		33 If newly built	
Total useful floor area (m <sup>2</sup> ): 2900		96 If typical of the existing stock	
Building complexity (NOS level): 3			
Building emission rate (kgCO <sub>2</sub> /m <sup>2</sup> ): 41.56			

## Administrative information

This is an Energy Performance Certificate as defined in SI2007:991 as amended

**Assessment Software:** iSBEM v5.2.b using calculation engine SBEM v5.2.b.1  
**Property Reference:** 000000000000  
**Assessor Name:** <insert name>  
**Assessor Number:** ABCD000000  
**Accreditation Scheme:** EPCgen.NET test AS  
**Employer/Trading Name:** <insert Employer/Trading Name>  
**Employer/Trading Address:** <insert Employer/Trading Address>  
**Issue Date:** 07 Apr 2014  
**Valid Until:** 06 Apr 2024 (unless superseded by a later certificate)  
**Related Party Disclosure:** Not related to the owner  
**Recommendations for improving the property are contained in Report Reference Number:** 0000-2090-0040-1000-0803

## If you have a complaint or wish to confirm that the certificate is genuine

Details of the assessor and the relevant accreditation scheme are on the certificate. You can get contact details of the accreditation scheme from the Government's website at [www.communities.gov.uk/epbd](http://www.communities.gov.uk/epbd), together with details of the procedures for confirming authenticity of a certificate and for making a complaint.



For advice on how to take action and to find out about technical and financial assistance schemes to help make buildings more energy efficient visit [www.carbontrust.co.uk](http://www.carbontrust.co.uk) or call us on 0800 085 2005



## A.2. Recommendations Report for Example Building

0000-2090-0040-1000-0803

### Recommendation Report



Report Reference Number: 0000-2090-0040-1000-0803

56 London Road  
LONDON  
SW23 1HA

Building Type(s): B1 Offices and Workshop businesses

#### ADMINISTRATIVE INFORMATION

Issue Date:	07 Apr 2014
Valid Until:	06 Apr 2024 (*)
Total Useful Floor Area (m <sup>2</sup> ):	2900
Calculation Tool Used:	iSBEM v5.2.b using calculation engine SBEM v5.2.b.1
Property Reference:	000000000000
Energy Performance Certificate for the property is contained in Report Reference Number: 0100-0038-0000-0029-0002	

#### ENERGY ASSESSOR DETAILS

Assessor Name:	<insert name>
Employer/Trading Name:	<insert Employer/Trading Name>
Employer/Trading Address:	<insert Employer/Trading Address>
Assessor Number:	ABCD000000
Accreditation scheme:	EPCgen.NET test AS
Related Party Disclosure:	Not related to the owner

(\*) Unless superseded by a later recommendation report

Page 1 of 7

## Table of Contents

1. Background.....	3
2. Introduction.....	3
3. Recommendations.....	4
4. Next Steps.....	5
5. Glossary.....	7

ONLY FOR ILLUSTRATION

## 1. Background

Statutory Instrument 2007 No. 991, *The Energy Performance of Buildings (Certificates and Inspections) (England and Wales) Regulations 2007*, as amended, transposes the requirements of Articles 7.2 and 7.3 of the Energy Performance of Buildings Directive 2002/91/EC.

This report is a Recommendation Report as required under regulations 16(2)(a) and 19 of the Statutory Instrument SI 2007:991.

This section provides general information regarding the building:

Total Useful Floor Area (m <sup>2</sup> ):	2900
Building Environment:	Air Conditioning

## 2. Introduction

This Recommendation Report was produced in line with the Government's approved methodology and is based on calculation tool iSBEM v5.2.b using calculation engine SBEM v5.2.b.1 .

In accordance with Government's current guidance, the Energy Assessor did undertake a walk around survey of the building prior to producing this Recommendation Report.



### 3. Recommendations

The following sections list recommendations selected by the energy assessor for the improvement of the energy performance of the building. The recommendations are listed under four headings: short payback, medium payback, long payback, and other measures.

#### **a) Recommendations with a short payback**

This section lists recommendations with a payback of less than 3 years:

Recommendation	Potential impact
Consider replacing T8 lamps with retrofit T5 conversion kit.	HIGH
Introduce HF (high frequency) ballasts for fluorescent tubes: Reduced number of fittings required.	LOW

#### **b) Recommendations with a medium payback**

This section lists recommendations with a payback of between 3 and 7 years:

No recommendations of medium term payback have been identified

#### **c) Recommendations with a long payback**

This section lists recommendations with a payback of more than 7 years:

Recommendation	Potential impact
Consider installing building mounted wind turbine(s).	LOW
Add time control to heating system.	LOW
Consider installing PV.	LOW
Add optimum start/stop to the heating system.	LOW
Some walls have uninsulated cavities - introduce cavity wall insulation.	LOW

#### **d) Other recommendations**

This section lists other recommendations selected by the energy assessor, based on an understanding of the building, and / or based on a valid existing energy report.

No recommendations defined by the energy assessor have been identified

## 4. Next steps

### **a) Your Recommendation Report**

As the building occupier, regulation 10(1) of SI 2007:991 requires that an Energy Performance Certificate "must be accompanied by a recommendation report".

You must be able to produce a copy of this Recommendation Report within seven days if requested by an Enforcement Authority under regulation 39 of SI 2007:991.

This Recommendation Report has also been lodged on the Government's central register. Access to the report, to the data used to compile the report, and to previous similar documents relating to the same building can be obtained by request through the Non-Dwellings Register ([www.epcregister.com](http://www.epcregister.com)) using the report reference number of this document.

### **b) Implementing recommendations**

The recommendations are provided as an indication of opportunities that appear to exist to improve the building's energy efficiency.

The calculation tool has automatically produced a set of recommendations, which the Energy Assessor has reviewed in the light of his / her knowledge of the building and its use. The Energy Assessor may have comments on the recommendations based on his / her knowledge of the building and its use. The Energy Assessor may have inserted additional measures in section 3d (Other Recommendations). He / she may have removed some automatically generated recommendations or added additional recommendations.

These recommendations do not include matters relating to operation and maintenance which cannot be identified from the calculation procedure.

**c)Legal disclaimer**

The advice provided in this Recommendation Report is intended to be for information only. Recipients of this Recommendation Report are advised to seek further detailed professional advice before reaching any decision on how to improve the energy performance of the building.

**d)Complaints**

Details of the assessor and the relevant accreditation scheme are on this report and the energy performance certificate. You can get contact details of the accreditation scheme from our website at [www.communities.gov.uk/epbd](http://www.communities.gov.uk/epbd), together with details of their procedures for confirming authenticity of a certificate and for making a complaint.

ONLY FOR ILLUSTRATION

## 5. Glossary

### **a) Payback**

The payback periods are based on data provided by Good Practice Guides and Carbon Trust energy survey reports and are average figures calculated using a simple payback method. It is assumed that the source data is correct and accurate using up to date information.

The figures have been calculated as an average across a range of buildings and may differ from the actual payback period for the building being assessed. Therefore, it is recommended that each suggested measure be further investigated before reaching any decision on how to improve the energy efficiency of the building.

### **b) Carbon impact**

The High / Medium / Low carbon impact indicators against each recommendation are provided to distinguish, between the suggested recommendations, those that would have most impact on carbon emissions from the building. For automatically generated recommendations, the carbon impact indicators are determined by software, but may have been adjusted by the Energy Assessor based on his / her knowledge of the building. The impact of other recommendations are determined by the assessor.

### **c) Valid report**

A valid report is a report that has been:

- Produced within the past 10 years
- Produced by an Energy Assessor who is accredited to produce Recommendation Reports through a Government Approved Accreditation Scheme
- Lodged on the Register operated by or on behalf of the Secretary of State.



### A.3. Sample SBEM Secondary Recommendations Report

## Secondary Recommendations Report

Not for Official Submission

Building name

**Example building**

Building type: B1 Offices and Workshop businesses

Date: Mon Apr 07 17:18:28 2014

This report lists recommendations for energy-efficiency improvements to the building.

Key to colour codes used in this report

Included by the calculation  
Included by the user  
Excluded by the user

Recommendations for **HEATING**

**HEATING accounts for 1.2% of the CO2 emissions**  
The overall energy performance of HEATING provision is GOOD  
The overall CO2 performance of HEATING provision is GOOD  
The average energy efficiency of HEATING provision is GOOD  
The average CO2 efficiency of HEATING provision is GOOD

**Add time control to heating system.**

Code:	EPC-H2
Energy Impact:	LOW
CO2 Impact:	LOW
CO2 Saved per £ Spent:	POOR
Applicable to:	Whole building

Comments:

**Add local time control to heating system.**

Code:	EPC-H5
Energy Impact:	LOW
CO2 Impact:	LOW
CO2 Saved per £ Spent:	POOR
Applicable to:	Whole building

Comments:

**Add local temperature control to the heating system.**

Code:	EPC-H6
Energy Impact:	LOW
CO2 Impact:	LOW
CO2 Saved per £ Spent:	POOR
Applicable to:	Whole building

Comments:

**Add optimum start/stop to the heating system.**

Code:	EPC-H7
Energy Impact:	LOW
CO2 Impact:	LOW

CO2 Saved per £ Spent: POOR  
Applicable to: Whole building

Comments:

---

**Add weather compensation controls to heating system.**

Code: EPC-H8  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: Whole building

Comments:

---

**Add time control to heating system.**

Code: EPC-H2  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: HVAC for the example building

Comments:

---

**Add local time control to heating system.**

Code: EPC-H5  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: HVAC for the example building

Comments:

---

**Add local temperature control to the heating system.**

Code: EPC-H6  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: HVAC for the example building

Comments:

---

**Add optimum start/stop to the heating system.**

Code: EPC-H7  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: HVAC for the example building

Comments:

---

**Add weather compensation controls to heating system.**

Code: EPC-H8  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: HVAC for the example building

Comments:

## Recommendations for COOLING

### COOLING accounts for 24.8% of the CO2 emissions

The overall energy performance of COOLING provision is FAIR  
The overall CO2 performance of COOLING provision is FAIR  
The average energy efficiency of COOLING provision is GOOD  
The average CO2 efficiency of COOLING provision is GOOD

There are no recommendations for COOLING

## Recommendations for HOT-WATER

### HOT-WATER accounts for 12.4% of the CO2 emissions

The overall energy performance of HOT-WATER provision is GOOD  
The overall CO2 performance of HOT-WATER provision is GOOD  
The average energy efficiency of HOT-WATER provision is GOOD  
The average CO2 efficiency of HOT-WATER provision is GOOD

There are no recommendations for HOT-WATER

## Recommendations for LIGHTING

### LIGHTING accounts for 37.4% of the CO2 emissions

The overall energy performance of LIGHTING provision is GOOD  
The overall CO2 performance of LIGHTING provision is GOOD

#### Consider replacing T8 lamps with retrofit T5 conversion kit.

Code: EPC-L5  
Energy Impact: MEDIUM  
CO2 Impact: HIGH  
CO2 Saved per £ Spent: GOOD  
Applicable to: Whole building

Comments:

#### Introduce HF (high frequency) ballasts for fluorescent tubes: Reduced number of fittings required.

Code: EPC-L7  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: GOOD  
Applicable to: Whole building

Comments:

## Recommendations for RENEWABLES

#### Consider installing building mounted wind turbine(s).

Code: EPC-R2  
Energy Impact: LOW

CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: Whole building

Comments:

---

**Consider installing PV.**

Code: EPC-R4  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: Whole building

Comments:

## Recommendations for OVERHEATING

There are no recommendations for OVERHEATING

## Recommendations for ENVELOPE

---

**Some walls have uninsulated cavities - introduce cavity wall insulation.**

Code: EPC-E4  
Energy Impact: LOW  
CO2 Impact: LOW  
CO2 Saved per £ Spent: POOR  
Applicable to: Whole building

Comments:

## Recommendations for FUEL-SWITCHING

There are no recommendations for FUEL-SWITCHING

## Recommendations for AUXILIARY

**AUXILIARY accounts for 24.3% of the CO2 emissions**

The overall energy performance of AUXILIARY provision is FAIR  
The overall CO2 performance of AUXILIARY provision is FAIR

There are no recommendations for AUXILIARY

## Recommendations for OTHER

There are no recommendations for OTHER



## A.4. Sample Energy Performance Certificate for Scotland

Energy Performance Certificate for buildings other than dwellings

Building Energy Performance		Scotland
Energy Performance Certificate	Calculated asset rating using iSBEM v5.2.a [SBEM]	Building type Office/Workshop
	Current rating	
	Excellent	
	Carbon Neutral	
	A (0 to 15)	
	B (16 to 30)	
	C (31 to 45)	
	D (46 to 60)	
	E (61 to 80)	
	F (81 to 100)	
G (100+)		
Carbon Dioxide Emissions		
The number refers to the calculated carbon dioxide emissions in terms of kg per m <sup>2</sup> of floor area per year		110
Approximate current energy use per m <sup>2</sup> of floor area:		237 kWh/m <sup>2</sup>
Main heating fuel: Natural Gas		Building Services: Air conditioning
Renewable energy source: None		Electricity: Grid supplied
Carbon Dioxide is a greenhouse gas which contributes to climate change. Less Carbon Dioxide emissions from buildings helps the environment.		
Benchmarks		
A building of this type built to building regulations standards current at the date of issue of this certificate would have a rating:		52 D+
Where the accompanying recommendations for the cost effective improvement of energy performance are applied, this building would have a rating:		61 E+
Recommendations for the cost-effective improvement (lower cost measures) of the energy performance		
1. Consider replacing T8 lamps with retrofit T5 conversion kit. 2. Introduce HF (high frequency) ballasts for fluorescent tubes: Reduced number of fittings required. 3. The default chiller efficiency is chosen. It is recommended that the chiller system be investigated to gain an understanding of its efficiency and possible improvements. 4. Add time control to heating system. 5. Add optimum start/stop to the heating system. 6. The default heat generator efficiency is chosen. It is recommended that the heat generator system be investigated to gain an understanding of its efficiency and possible improvements.		
Address: Any Road, Any Town, EE00 E00		
Conditioned area (m <sup>2</sup> ): 2900		
Name of protocol organisation: Sterling Accreditation Ltd, [ABDG123456]		
Date of issue of certificate: 06 Jan 2014 (Valid for a period not exceeding 10 years)		
This certificate is a requirement of EU Directive 2002/91/EC on the energy performance of buildings.		
NB THIS CERTIFICATE MUST BE AFFIXED TO THE BUILDING AND NOT REMOVED UNLESS REPLACED WITH AN UPDATED VERSION AND FOR PUBLIC BUILDINGS DISPLAYED IN A PROMINENT PLACE		

## APPENDIX B: List of parameters required by iSBEM for EPC calculations

### Form: General

#### **Tab: General Information**

##### Sub-tab: Project details

- Purpose of analysis
- Type of EPC (*field enabled only for EPC Scotland*)
- EPC in Welsh? (*field enabled only for EPC Wales*)
- Additionally check Building regulations?
- Weather (location)
- Stage of analysis
- Project complexity (*field enabled only for England, Wales, and Northern Ireland EPCs*)
- S6 type of Building (*field enabled only for Scotland EPC*)
- Is the building fully naturally ventilated and calculations confirm it temperature during occupancy periods are always below 28°C? (*field enabled only for Scotland EPC*)
- Rating with improvements (*field enabled only for Scotland EPC*)
- Rating if in E&W (*field enabled only for Scotland EPC*)
- Main renewable source (*field enabled only for Scotland EPC*)
- Is mains gas available on site? (*field enabled only for Scotland and Wales EPCs*)

##### Sub-tab: Additional Project details

- Related party disclosure (*field enabled only for England, Wales, and Northern Ireland EPCs*)
- Transaction type

##### Sub-tab: Building details

- Building type
- Name of project
- Building address
- City
- Postcode
- Location description
- UPRN
- Are any restrictions to be imposed on the retrieval of the EPC's XML file from the National Register in Scotland (*field enabled only for Scotland EPC*)
- Inspection date
- Is building of special conservation status? (*field enabled only for England, Wales, and Northern Ireland EPCs*)

##### Sub-tab: Energy Assessor's / Qualified/Accredited Person's details

##### Sub-form: Energy Assessor's / Qualified/Accredited Person's details

- Name
- Telephone number
- Email address
- Address
- City
- Postcode
- Assessor number/Membership number
- Accreditation Scheme / Protocol Organisation
- Qualifications (*field enabled only for England, Wales, and Northern Ireland EPCs*)
- Employer/Trading name
- Employer/Trading address

##### Sub-form: Insurance details

- Insurance Company
- Policy Number
- Policy start/effective date
- Policy end/expiry date
- Policy cover limit

Sub-tab: Owner's details

- Name
- Telephone number
- Address
- City
- Postcode

## Form: Project Database

### **Tab: Construction for walls**

Sub-tab: General

- Name of construction
- Does it involve metal cladding?
- Globally used in walls that connect zone to
- Definition of construction of walls using one of the following 3 options:
  - 1) Library
    - Category
    - Library
  - or
  - 2) Inference procedures
    - Building sector
    - Building Regulations compliance
    - General description
  - or
  - 3) Enter parameters manually
    - U-value [ $\text{W/m}^2\text{K}$ ]
    - $\kappa_m$  [ $\text{kJ/m}^2\text{K}$ ]

### **Tab: Construction for roofs**

Sub-tab: General

- Name of construction
- Does it involve metal cladding?
- Globally used in roofs that connect zone to
- Definition of construction of roofs using one of the following 3 options:
  - 1) Library
    - Category
    - Library
  - or
  - 2) Inference procedures
    - Building sector
    - Building Regulations compliance
    - General description
  - or
  - 3) Enter parameters manually
    - U-value [ $\text{W/m}^2\text{K}$ ]
    - $\kappa_m$  [ $\text{kJ/m}^2\text{K}$ ]

### **Tab: Construction for floors**

Sub-tab: General

- Name of construction
- Globally used in floors that connect zone to
- Definition of construction of floors using one of the following 3 options:

- 1) Library
  - Category
  - Library
- or
- 2) Inference procedures
  - Building sector
  - Building Regulations compliance
  - General description
- or
- 3) Enter parameters manually
  - U-value [ $\text{W}/\text{m}^2\text{K}$ ]
  - $\kappa_m$  [ $\text{kJ}/\text{m}^2\text{K}$ ]
  - Has the U-value been corrected to account for heat loss through floors in contact with the ground?

**Tab: Construction for doors**

Sub-tab: General

- Name of construction
- Definition of construction of doors using one of the following 3 options:
  - 1) Library
    - Category
    - Library
  - or
  - 2) Inference procedures
    - Building sector
    - Building Regulations compliance
    - General description
  - or
  - 3) Enter parameters manually
    - U-value [ $\text{W}/\text{m}^2\text{K}$ ]
    - $\kappa_m$  [ $\text{kJ}/\text{m}^2\text{K}$ ]

**Tab: Glazing**

Sub-tab: General

- Name of construction
- Definition of construction of glazing using one of the following 3 options:
  - 1) Library
    - Category
    - Library
  - or
  - 2) Inference procedures
    - Building Regulations compliance
    - Number of panes
    - Coating
    - Frame material
  - or
  - 3) Enter parameters manually
    - U-value - for glazing in vertical inclination [ $\text{W}/\text{m}^2\text{K}$ ]
    - T-solar – for normal incidence
    - L-solar – for normal incidence

**Form: Geometry**

**Tab: Project**

Sub-tab: General & Geometry

- Global air permeability at 50pa [ $\text{m}^3/\text{h.m}^2$ ]
- Building (clockwise) rotation [degrees]
- Global zone floor-to-floor height [m]

- Maximum number of storeys
- Building area [m<sup>2</sup>]

**Sub-tab: Thermal Bridges**

- Global Psi value [W/mK] for junctions involving metal cladding for each of:
  - Roof-Wall
  - Wall-Ground floor
  - Wall-Wall (corner)
  - Wall-Floor (not ground floor)
  - Lintel above window or door
  - Sill below window
  - Jamb at window or door
- Global Psi value [W/mK] for junctions not involving metal cladding for each of:
  - Roof-Wall
  - Wall-Ground floor
  - Wall-Wall (corner)
  - Wall-Floor (not ground floor)
  - Lintel above window or door
  - Sill below window
  - Jamb at window or door

**Tab: Zones**

**Sub-tab: General**

- Zone name
- HVAC system which serves the zone
- Building type
- Activity type in the zone
- Zone area [m<sup>2</sup>]
- Zone floor-to-floor height [m], or select global value
- Air permeability at 50pa [m<sup>3</sup>/h.m<sup>2</sup>] in the zone, or select global value
- Is this a fit-out area in a shell and core building?
- Zone multiplier
- Description of zone
- Define the following Psi values for thermal bridges in the zone or use global values?
  - Zone Psi value [W/mK] for junctions involving metal cladding for each of:
    - § Roof-Wall
    - § Wall-Ground floor
    - § Wall-Wall (corner)
    - § Wall-Floor (not ground floor)
    - § Lintel above window or door
    - § Sill below window
    - § Jamb at window or door
  - Zone Psi value [W/mK] for junctions not involving metal cladding for each of:
    - § Roof-Wall
    - § Wall-Ground floor
    - § Wall-Wall (corner)
    - § Wall-Floor (not ground floor)
    - § Lintel above window or door
    - § Sill below window
    - § Jamb at window or door

**Tab: Envelopes**

**Sub-tab: General**

- Envelope name
- Zone which envelope belongs to

- Type of envelope
  - Pitch angle [degrees] (*field enabled if envelope type is roof or floor/ceiling*)
  - Perimeter length [m] (*field enabled if envelope type is wall*)
- Envelope connects space to, or select global value
- Envelope construction
- Envelope area [m<sup>2</sup>]
- Envelope orientation
- Is there a solar collector (SC) on this wall? (*field enabled if envelope type is wall*)
  - SC name
  - SC area [m<sup>2</sup>]
- Definition of any thermal bridges in the envelope additional to global values
  - Thermal bridge multiplier
  - Thermal bridge length [m]
  - Thermal bridge Psi [W/mK]
  - Thermal bridge description

#### **Tab: Doors**

##### Sub-tab: General

- Door name
- Envelope which door is in
- Door type
- Door construction
- Door area [m<sup>2</sup>]
- Definition of any thermal bridges in the door additional to global values
  - Thermal bridge multiplier
  - Thermal bridge length [m]
  - Thermal bridge Psi [W/mK]
  - Thermal bridge description

#### **Tab: Windows & Rooflights**

##### Sub-tab: General

- Window/Rooflight name
- Envelope which window/rooflight is in
- Glazing type
- Window/Rooflight projected area [m<sup>2</sup>]
- Ratio of developed area to projected area of window/rooflight
- Ratio of roof area covered by rooflight array to area of rooflight glazing
- Is it a display window?
- Frame factor
- Aspect ratio
- Shading position on window/rooflight
  - Shading colour
  - Shading translucency
- Transmission factor due to fins and overhangs
- Is overhand a brise-soleil?
- Definition of any thermal bridges in the window/rooflight additional to global values
  - Thermal bridge multiplier
  - Thermal bridge length [m]
  - Thermal bridge Psi [W/mK]
  - Thermal bridge description

### **Form: Building Services**

#### **Tab: Global and Defaults**

#### Sub-tab: HVAC System Defaults

- Fuel type for default Heating only – Other systems
- Fuel type for default Heating and mechanical cooling systems

#### Sub-tab: Project building services

- Do the lighting systems have provision for metering? (*field not enabled for EPC Scotland*)
  - Is there monitoring and testing with alarm for out-of-range values? (*field enabled if lighting systems have provision for metering*)
- Electric power factor
- The CO<sub>2</sub> emission factor for the district heating network. (*field enabled only if the heat source and fuel type of any of the HVAC systems is set to be district heating*)
- The primary energy factor for the district heating network. (*field enabled only if the heat source and fuel type of any of the HVAC systems is set to be district heating*)

#### Sub-tab: Air Conditioning Inspection (*sub-tab not enabled for EPC Scotland*)

- Does the building have an air conditioning system?
  - Is the actual output unknown?
    - § Total effective rated output of the air conditioning system [kW]
    - or
    - § Estimated total effective rated output of the air conditioning system
  - Has an air conditioning inspection been commissioned for compliance with Energy Performance of Buildings regulations?

### **Tab: HVAC Systems**

#### Sub-tab: General

- HVAC system name
- HVAC system type
  - Heat recovery in ventilation system (*field enabled if there is mechanical ventilation at HVAC level*)
    - § Heat recovery seasonal efficiency
    - § Variable heat recovery efficiency?

#### Sub-tab: Heating System

- Heat source
- Fuel type for heat generator
- Does this heating system also use CHP?
- Effective heat generating seasonal efficiency for heat generator
- Heat generator radiant efficiency (*field enabled if HVAC is a radiant system*)
- Does the heating system qualify for ECA (*relevant only if default efficiency value is used*)?
  - Was the heating system installed in or after 1998 (*relevant only if default efficiency value is used*)?

#### Sub-tab: Cooling System (*enabled only if HVAC system provides cooling*)

- Generator type
- Generator kW
- Fuel type for cooling generator
- Seasonal energy efficiency ratio for cooling generator
- Nominal energy efficiency ratio for cooling generator
- Does the cooling system qualify for ECA (*relevant only if default efficiency value is used*)?
- Does the system have mixed-mode operation strategy?

#### Sub-tab: System adjustment (*enabled only if there is mechanical ventilation at HVAC level*)

- Has the ductwork been leakage tested?
  - CEN classification it meets

- Does the AHU meet CEN leakage standards?
  - CEN classification it meets
- Specific fan power [W/(l/s)]
- Variable speed pumping?
  - Type

#### Sub-tab: Metering Provision

- Does the HVAC system have provision for metering? (*field not enabled for EPC Scotland*)
  - Is there monitoring and testing with alarm for out-of-range values? (*field enabled if HVAC system has provision for metering*)

#### Sub-tab: Bi-valent Systems

- Heat source
- Fuel type for heat generator
- Effective heat generating seasonal efficiency for heat generator
- Proportion of heating load provided by heat generator

#### Sub-tab: System Controls

- Does the HVAC system have central time control?
- Does the HVAC system have optimum stop/start control?
- Does the HVAC system have local time control?
- Does the HVAC system have local temperature control?
- Does the HVAC system have weather compensation control?

### **Tab: HWS**

#### Sub-tab: General

- HWS name
- HWS generator type
  - Fuel type for HWS generator (*field enabled if hot water is not generated by HVAC system*)
  - Effective heat generating seasonal efficiency for HWS generator (*field enabled if hot water is not generated by HVAC system*)
  - Was the HWS installed later than 1998 (*relevant only if default efficiency value is used*)? (*field enabled if hot water is not generated by HVAC system*)

#### Sub-tab: Storage & Secondary Circulation

- Is the system a storage system?
  - Storage volume [litres]
  - Insulation type on storage vessel
    - § Insulation thickness [mm]
  - or
  - Storage losses [MJ/month]
  - Does the system have secondary circulation?
    - § Circulation losses [W/m]
    - § Pump power [kW]
    - § Loop length [m]
    - § Is there time control on the secondary circulation?

#### Sub-tab: Bi-valent Systems

- Heat generator type
- Fuel type for heat generator
- Effective heat generating seasonal efficiency for heat generator
- Proportion of water heating load provided by heat generator

### **Tab: SE Systems**

#### Sub-tab: Collector Parameters

- SES name
- HWS which SES is in
- SES area [m<sup>2</sup>]
- SES multiplier
- SES orientation



- SES inclination [degrees]
- Do you know the collector performance parameters according to EN 12975-2?
  - Zero-loss collector efficiency factor
  - Collector heat loss coefficient [ $\text{W/m}^2\text{K}$ ]
  - Temperature dependence of heat loss coefficient [ $\text{W/m}^2\text{K}$ ]
  - Incidence angle modifier of collector

Sub-tab: Solar Storage & Collector Loop

- Solar storage volume [litres]
- Solar pre-heating type
  - Insulation type on storage vessel
    - § Insulation thickness [mm]
- Do you know the heat transfer rate of the heat exchanger(s) in the collector loop?
  - Heat transfer rate [ $\text{W/K}$ ]
- Do you know the overall heat loss coefficient of all pipes in the collector loop?
  - Heat loss coefficient [ $\text{W/K}$ ]

Sub-tab: Auxiliary Energy & Distribution Losses

- Are the distribution pipes between the solar energy system and the back-up system insulated? (*field enabled only if the solar pre-heating type is a separate solar cylinder*)
- Circulation system
  - Do you know the nominal power of the pumps?
    - § Nominal power of the pumps [W]

**Tab: PV Systems**

Sub-tab: General

- PVS name
  - either
    - PVS type
    - PVS area [ $\text{m}^2$ ]
  - or
    - PVS peak power
- PVS multiplier
- PVS orientation
- PVS inclination [degrees]
- PVS overshadowing
- PVS ventilation strategy

**Tab: Wind Generators**

Sub-tab: General

- Wind generator name
- Terrain type
- Horizontal axis?
  - Diameter of blades [m]
- Other axis?
  - Area swept by blades [ $\text{m}^2$ ]
- Hub height [m]
- Wind generator power [kW]

**Tab: CHP Generator**

Sub-tab: General

- Fuel type
- Heat efficiency
- Electrical efficiency
- CHPQA Quality Index
- % of building space heat supplied by CHP

- % of building hot water supplied by CHP
- Is it a tri-generation system?
  - % of building space cooling supplied by CHP
  - Chiller efficiency

**Tab: Solar Collectors**

Sub-tab: General

- SC name
- SC type
- SC control type
- SC shading factor
- TSC type
- TSC operation
- TSC absorptivity
- NTSC collector height [m]
- NTSC air temperature coefficient [ $K/(W/m^2)$ ]
- Air flow rate coefficient

Sub-tab: Air flows

- Is SC provided with independent fan?
  - SC supply specific fan power [ $W/(l/s)$ ]
- SC design air flow rate [ $m^3/s$ ]

**Tab: Zones**

Sub-tab: HVAC, HWS, and Lighting systems

- HVAC system which services the zone
- Are there de-stratification fans in the zone?
- HWS which serves the zone
- Dead leg length for HWS in the zone [m]

Sub-tab: Ventilation

- Zonal ventilation system – natural or mechanical (*field enabled if there is no mechanical ventilation at HVAC level*)
  - Specific fan power for supply & extract [ $W/(l/s)$ ] (*field enabled if there is mechanical ventilation at zone level*)
  - Demand-controlled ventilation?
    - § Flow regulation type
- Does activity require high pressure drop air treatment?

Sub-tab: Ventilation (cont.)

- Heat recovery in the zone ventilation (*field enabled if there is mechanical ventilation at zone level*)
  - Heat recovery seasonal efficiency
  - Variable heat recovery efficiency?
- Specific fan power for system terminal units [ $W/(l/s)$ ]

Sub-tab: Exhaust

- Is there mechanical exhaust in the zone?
  - Flow rate of mechanical exhaust [ $l/s.m^2$ ]
  - Specific fan power for exhaust [ $W/(l/s)$ ]
  - Extract system serves single or multiple rooms?

Sub-tab: Lighting

- Design illuminance [lux]
- Provide information on lighting using one of the following 3 options:
  - 1) Full lighting design
    - Total wattage [W]
  - or
  - 2) Lighting chosen but calculation not carried out
    - Lumens per circuit wattage
    - Light output ratio
  - or
  - 3) Lighting parameters not available
    - Lamp type

- Does display lighting use efficient lamps? (*field enabled for activities with display lighting*)
  - Lumens per circuit wattage for display lighting
- Are air-extracting luminaries fitted?

Sub-tab: Lighting Controls

- Type of lighting controls in the zone
  - Local manual switching?
  - Photoelectric?
    - § Dimming or switching?
    - § Type of sensors?
    - § Different sensor for back of zone?
  - Constant illuminance control?
    - § Parasitic power for photoelectric control and/or constant illuminance control
  - Do you want SBEM to perform automatic daylight zoning for lighting controls?
    - § Percentage area of zone where lighting is controlled by daylight.
- Type of occupancy sensing in the zone
  - Parasitic power for occupancy sensing

Sub-tab: Display Lighting

- Does display lighting use efficient lamps? (*field enabled for activities with display lighting*)
  - Lumens per circuit wattage for display lighting
- Is there time-switching for display lighting? (*field enabled for activities with display lighting*)

Sub-tab: SC

- Name of SC system providing pre-heated air to this zone
- Percentage of the total air pre-heated by the SC system that is provided to this zone

DRAFT


## APPENDIX C: Connection to the National Register

If the XML file is not generated, you should check the following:

- Ensure that your computer is connected to the internet while running the EPC calculation.
- If applicable, ensure that you have entered the proxy server details correctly into iSBEM. Contact your IT department for assistance on your correct proxy server settings.
- If applicable, ensure that the firewall settings on your computer system allow access to the online systems which is needed for generating the XML file. Contact your IT department for assistance on your firewall settings. The websites and IP addresses that your firewall will need to allow access to are:
  - Landmark's National Non-Domestic Energy Performance Register for England and Wales ([www.ndepcregister.com](http://www.ndepcregister.com)) - IP: 81.17.74.226.
  - Landmark's National Non-Domestic Energy Performance Register for Northern Ireland ([www.epbniregisternd.com](http://www.epbniregisternd.com)) - IP: 81.17.74.228.
  - [www.epcgen1.net](http://www.epcgen1.net) - IP: 80.71.22.50.
- Ensure that your name is on the National Register of accredited non-domestic energy assessors ([www.ndepcregister.com](http://www.ndepcregister.com) for England and Wales and [www.epbniregisternd.com](http://www.epbniregisternd.com) for Northern Ireland), that your assessor number input into the tool is exactly as it appears on the National Register, e.g., do not confuse the letter O with the number 0 in your assessor number. If any of these details need amendment, contact your Accreditation Scheme Provider.
- Ensure that the EPC calculation in iSBEM has completed successfully (i.e., that it has not crashed with any errors before completion). If not, examine the error files (.err) and correct the errors before proceeding. You can contact your Accreditation Scheme Provider for assistance.
- If you have followed all the above guidance and still the XML file has not been generated, contact your Accreditation Scheme Provider.

## APPENDIX D: Agreed convention for decision on assessment level

**NB: The data below is developed and maintained by Accreditation Scheme Providers so it is constantly evolving, and assessors are advised to contact their scheme providers for the most up-to-date version.**

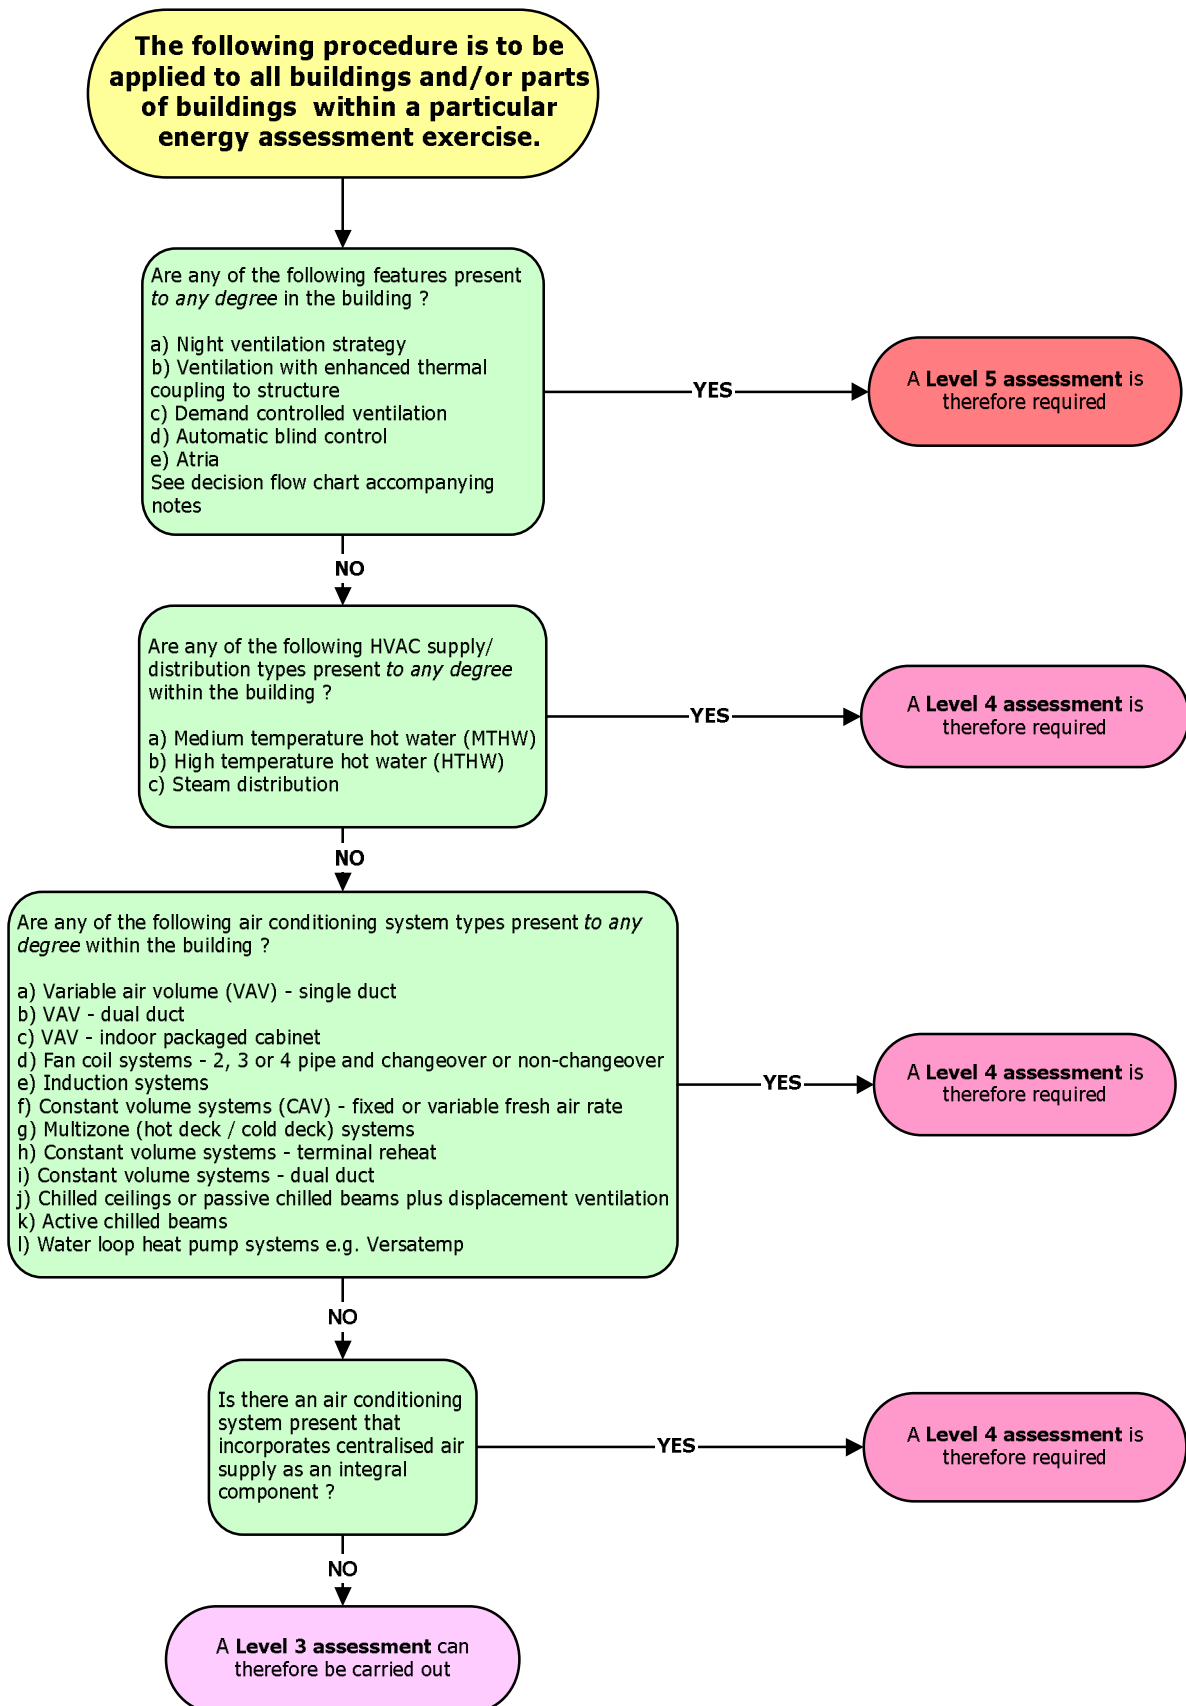

## **Accompanying Notes to Assessment Level Decision Flow Chart including agreed definitions**

**NB: The data below is developed and maintained by Accreditation Scheme Providers so it is constantly evolving, and assessors are advised to contact their scheme providers for the most up-to-date version.**

### **Air Permeability**

Air permeability is expressed as volume flow per hour ( $\text{m}^3/\text{h}$ ) of air supplied to the space per square metre ( $\text{m}^2$ ) of envelope area for an internal to external pressure difference of 50 Pa, i.e.,  $25 \text{ m}^3/\text{hm}^2$  at 50Pa.

### **Atrium**

In this context, a non-continuously occupied interior space within a building, often several storeys high, bounded on at least one side by occupied spaces set to the conditions determined from the activity database. There may or may not be building elements (such as glazing) surrounding the atrium (although there may need to be something for smoke control in case of fire). The atrium itself is not maintained to the conditions set by the activity database for adjoining spaces. The technical purpose of the atrium can be one or more of the following:

- Providing a buffer between the thermal conditions in the adjoining spaces and the exterior, to reduce the direct impact of the exterior on those zones. In this case, it should not be maintained to conditions as though it is occupied. (If it is conditioned and the features below do not apply, in this context, it is not considered to be an atrium.)
- Providing a means for daylight to reach the middle of deep plan spaces that would otherwise not receive it
- Encouraging stack effect or other passive ventilation to draw extract air from the adjoining spaces.

### **Automatic Blind Control**

In this context, internal or inter-pane (but not exterior) blinds that are motorised so that the position can be modified to control solar heat gain and/or glare, controlled by automatic sensors. The control regime must also open the blinds as the heat gain and/or daylight levels decrease, so that the use of these natural resources can be optimised for each zone. Note that exterior shading devices can be modelled using iSBEM in the definition of each window; however SBEM currently does not model the re-radiation effects of blinds where solar gain has entered the space before it is modulated by the shading device.

### **Demand-Controlled Ventilation**

Is defined as supply and/or extract ventilation that is modulated to match the needs of the actual occupation level of each zone, rather than operating at a constant level defined by the activity database. Thus the energy required to adjust the condition of the supply air and that required to move the air can be reduced. The rate of ventilation would typically be controlled by presence detectors,  $\text{CO}_2$  sensors, or another device that senses the varying requirement.

### **Lightwell**

A lightwell is a space surrounded by the walls of a building but that has no roof or glazing above it. It is, therefore, similar to a courtyard in appearance. The walls that surround the lightwell are exposed to external air.

### **Night Ventilation Strategy**

Can be defined as the presence of suitable systems, controls, and operating strategy such that overnight ventilation (passive and/or mechanical) is used to cool down the exposed building mass and, thereby, offset daytime cooling demands. If no such operation and subsequent offset is possible through the automatic operation of systems and controls, then night ventilation strategy is deemed to be not present as part of the building energy asset rating.

### **Lightpipes**

A lightpipe is a tube/pipe, consisting of internal reflective surfaces, which channels daylight to an internal area.

### **Ventilation with Enhanced Thermal Coupling to Structure**

This is a further development of the 'night ventilation' strategy such that significant components of the building structure, in addition to its ordinary surfaces, are exposed to night ventilation, in order to enhance the building's capability of offsetting daytime cooling demands. An example of this procedure is the ThermoDeck system where night ventilation is passed through ducts in the solid floors of the building, thereby, increasing the 'coolth' contained in the thermal capacity of the building structure available to offset subsequent summertime daytime cooling loads.


## APPENDIX E: Agreed convention for determining dimensions

**NB: The data below is developed and maintained by Accreditation Scheme Providers so it is constantly evolving, and assessors are advised to contact their scheme providers for the most up-to-date version.**

### Horizontal dimensions

Consider

- Plan view of two buildings in a terrace
  - Separated by a party wall
  - Building 1 has two zones
- Wall types
  - “Perimeter” surrounds each building (external and party walls)
  - “Internal” refers to walls within each building (partitions)

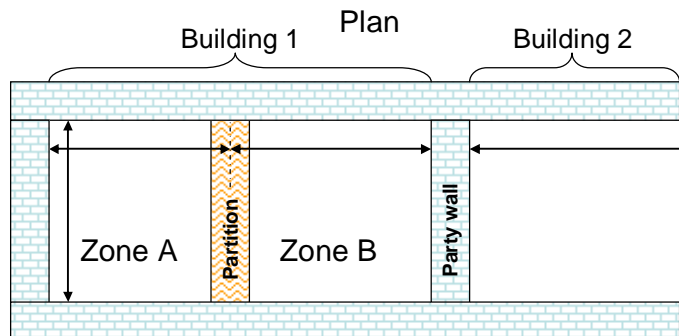


Generally follow RICS definition of Gross Internal Area

Need to measure

- Inside perimeter walls
- Mid point of internal walls
- Party walls are perimeter, so measure to surface, not mid point

### Openings

- Inside structural opening ( $w \times h$ )
- *Not just glass area*
- Percentage glazing is as viewed from inside
  - ie percentage of wall area to full zone height (defined below)
- 100% Glazing
  - Enter a wall of total area
  - Enter glazing with same area (or as 100%)

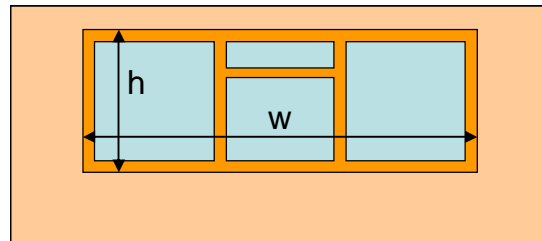





## Zone height and element areas

**Generally zone height is top of slab to top of slab for ground and intermediate floors, or soffit/eaves level at roof level**

- For ground and intermediate floors
  - Zone height is top of floor to top of floor
- For top floors with flat roof
  - Zone height is top of floor to soffit/underside of roof slab

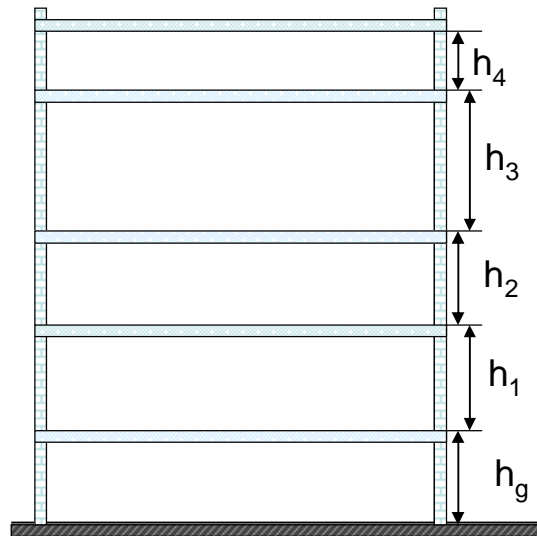


- For top floors with pitched roof but flat ceiling
  - Zone height is top of floor to underside of soffit/eaves level
  - U value is from under ceiling to outside roof including insulation wherever it is
    - that is, consistent with the area being entered
  - Area of gable wall is that below soffit/eaves level ie length  $L_4$  x  $h_4$

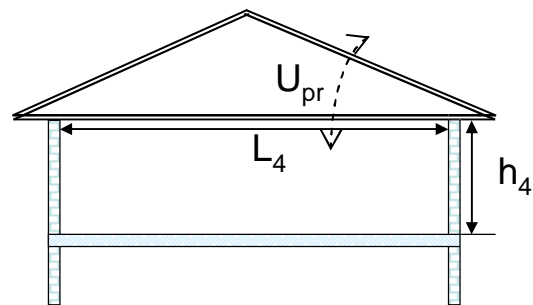


- For top floors with pitched roof and dropped ceiling with or without insulation at ceiling level

- Zone height ( $h_4$ ) is top of floor to underside of soffit/eaves level (not ceiling)
- U value is from under ceiling to outside roof
- Side and end wall areas are calculated to soffit/eaves level i.e. dropped ceiling is treated as though it is at soffit/eaves level
- This convention has been adopted to avoid having to determine the relative levels of ceiling and soffit, and confusion over where the insulation is placed

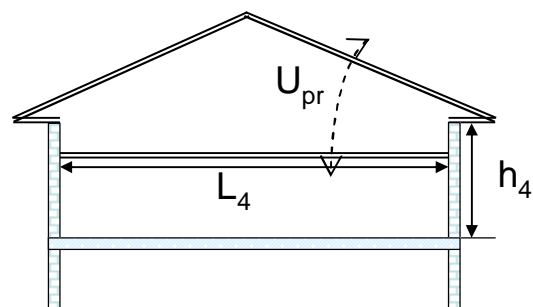


- For rooms with pitched ceiling (e.g. where ceiling is fixed in line of pitched roof)

- Zone height ( $h_4$ ) is top of floor to underside of soffit/eaves level (*not average room height*)
- Roof heat loss area is as seen from underside of ceiling, i.e.  $L_r \times d$  (zone depth)
- U value is from under ceiling to outside roof ( $U_r$ )
- End wall area is whole gable up to roof apex (as this is all exposed to inside temperature)

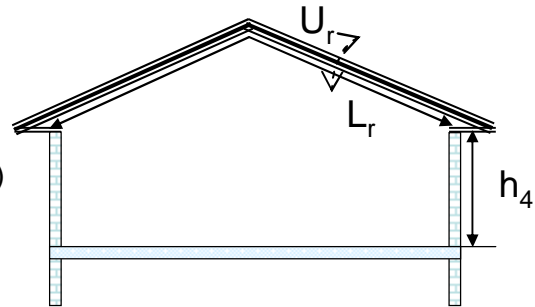

- If there is a horizontal ceiling half way up the pitched roof, split the area into

- The part with a void ( $L_{r1}$ ), using the U-value including the void ( $U_{r1}$ )
- The part where there is no void ( $L_{r2}$ ,  $L_{r3}$ ), using the U-value without a void ( $U_{r2}$ )
- Zone height is still to underside of soffit/eaves level

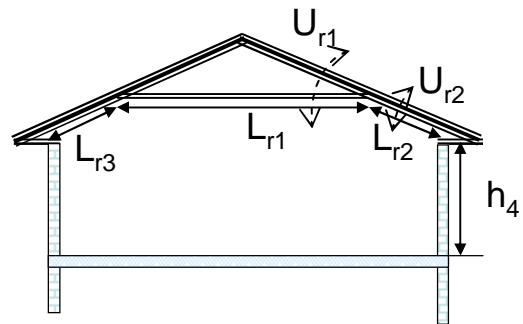


So the general rule is to **input the area exposed to the inside temperature, and the U-value between this surface and outside**, except for the dropped ceiling case.

- Intermediate floors with suspended ceilings and raised floors

- Zone height is top of floor slab to top of next floor slab e.g.  $h_1$
- So, ignore the suspended ceilings and raised floors for the purposes of
  - zone height
  - surrounding wall areas
- But include their impact on Kappa values of the slabs above and below so that thermal mass effects are calculated correctly

- With suspended timber ground floor and ventilated void below


- Zone height is top of suspended floor surface to top of first floor surface ( $h_{sf}$ )
- Where the floor U value is calculated it should take account of the ventilated void ( $U_{sf}$ )

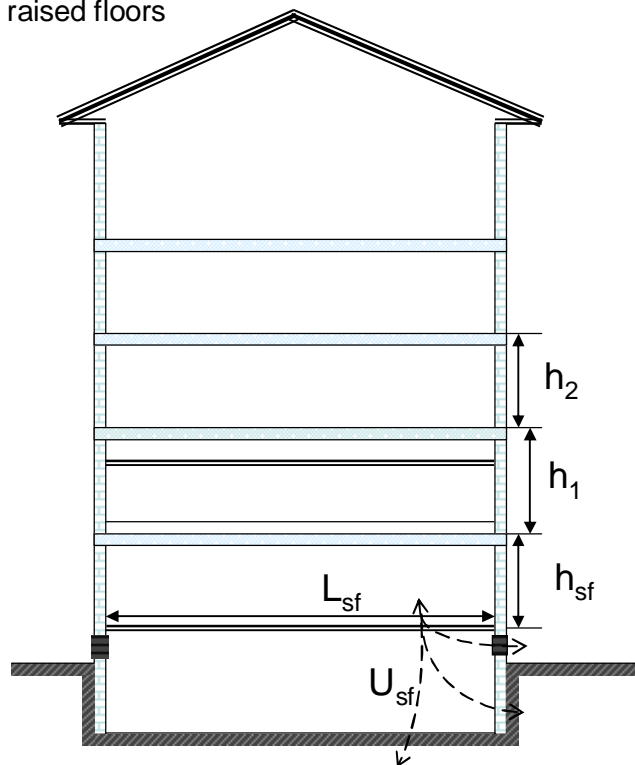

When there are walls of different heights to consider:

- For sloping floors and ceilings (eg auditoria)


- If the activity above and under the floor is the same, or the void is inaccessible, choose normal zone height, otherwise zone height = weighted average wall height  $h_{a1}$ ,  $h_{a2}$ ,  $h_{a3}$ , etc (from where floor adjoins each wall to top of floor above)
- Zone area  $A_a$  is projected area/plan area as per RICS GIA standard
- Make sure in addition that all external (and internal) wall and slab areas are input so that all heat loss/gain and thermal mass is calculated
- **Note that zoning for daylight areas must be carried out manually in these circumstances (do not use automatic daylight zoning)**

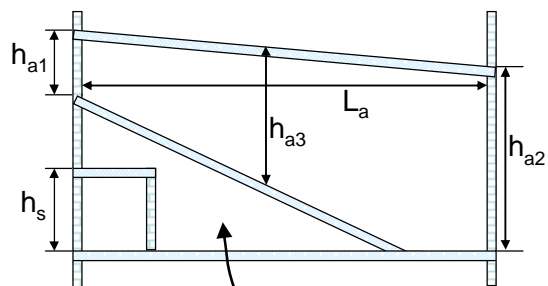

Don't forget this void is another zone if it has a different activity! Its zone height = area weighted average vertical wall height. If it has the same activity or is inaccessible, then merge with auditorium and enter zone area as though the floor is flat ( $L_a \times d$ ). However, the sloping floor area must be input so that thermal mass is calculated.)

- For cubical rooms under the sloping floor
  - Zone height = top of slab to top of slab ( $h_s$ )
- Area weighted average wall height is defined as total wall area divided by horizontal perimeter length (eg  $2L_a + 2 \times \text{depth (d)}$  in the diagram)

- For rooms with mono-pitched ceiling
  - Zone height is top of floor to weighted average height of all walls -  $h_4$
  - Area of roof ( $A_r$ ) is as seen from underside i.e.  $L_4 \times$  zone depth
  - U value from under ceiling to outside roof is  $U_r$
  - Use total area of gable wall
  - ***Note that zoning for daylit areas must be carried out manually in these circumstances***
- If there is a horizontal ceiling under the mono-pitched roof
  - Level with or below eaves: zone height at eaves
  - Above eaves: zone height = average exposed wall height
  - Roof area would have to be divided into areas with different U-values with and without void

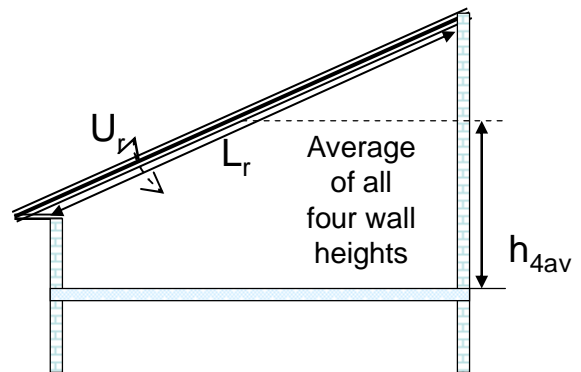


- Curved roof – for EPCs all buildings with curved roof sections shall be approximated as in the diagram:
  - Circular (not elliptical or other shapes)
  - Semi-circular so that width = 2 x height

- Walls are 70-90° from horizontal, roofs are <70°
- So zone height  $h_{cw}$  = dividing point between wall and roof, where slope = 70° at “eaves”

- If a floor (eg as shown dotted) meets roof at <70°, there is no wall, so zone height  $h_{cr}$  = average height of space

- If the dotted line represents the ceiling with an unoccupied void above, remember to input
  - the area of roof where the slope < 70° between this ceiling and the “eaves”, with its U value ( $U_{rc}$ ), and
  - the flat ceiling with U value ( $U_{clg}$ ) including the void above the ceiling

- Treat dormer windows the same as for a room in a pitched roof (see below)

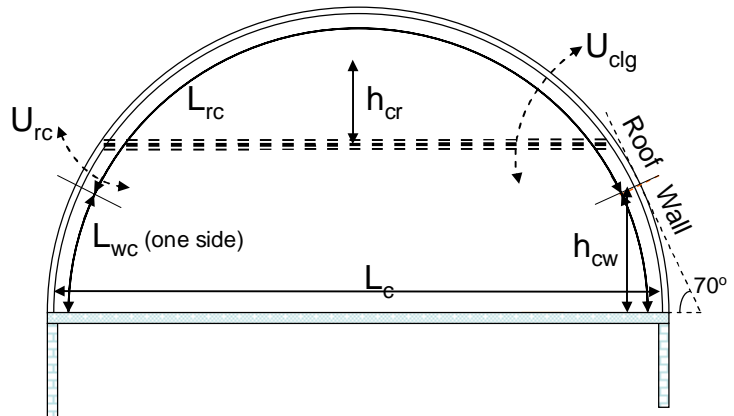

For consistency, the convention is to assume all such roofs are semi-circular. If floor width =  $L_c$  and building depth is  $d$

- Zone height  $h_{cw} = 0.171 \times L_c$
- Wall height  $L_{wc} = 0.175 \times L_c$
- Area curved walls =  $L_{wc} \times d \times 2$  (both sides)
- Curved roof width  $L_{rc} = 1.222 \times L_c$
- Area curved roof =  $L_{rc} \times d$

- For room in roof (or mansard roof):
  - Areas and U values should correspond
  - U values for walls should include any voids –  $U_{w1}$ ,  $U_{w2}$
  - Zone height ( $h_{w1}$ ) = height of vertical part of wall
  - If this varies, calculate area weighted average height

- Where there are dormer windows (ie window bays that project through the roof)
  - Do not adjust zone height for the dormer windows
  - Zone manually for daylit areas (if the glazing > 20% of vertical wall area)
  - Enter the glazing details and areas as normal
  - **Note that zoning for daylit areas must be carried out manually in these circumstances**

